
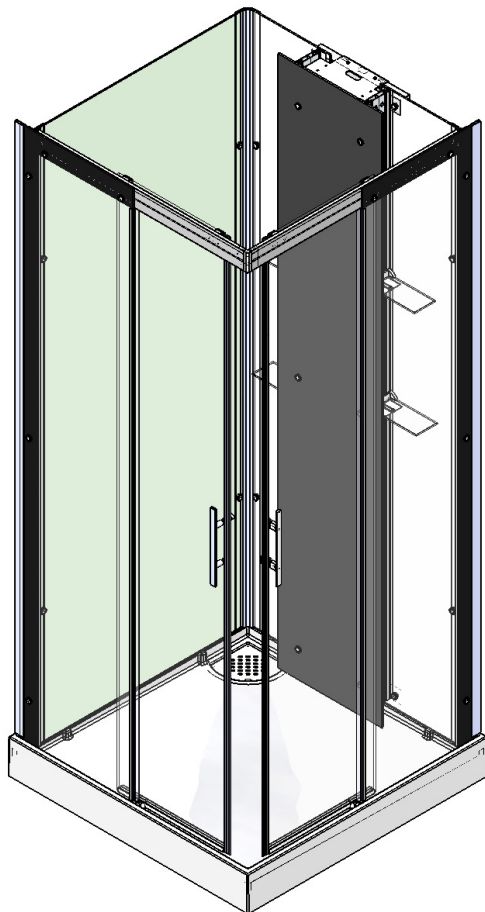


GB Installation instructions

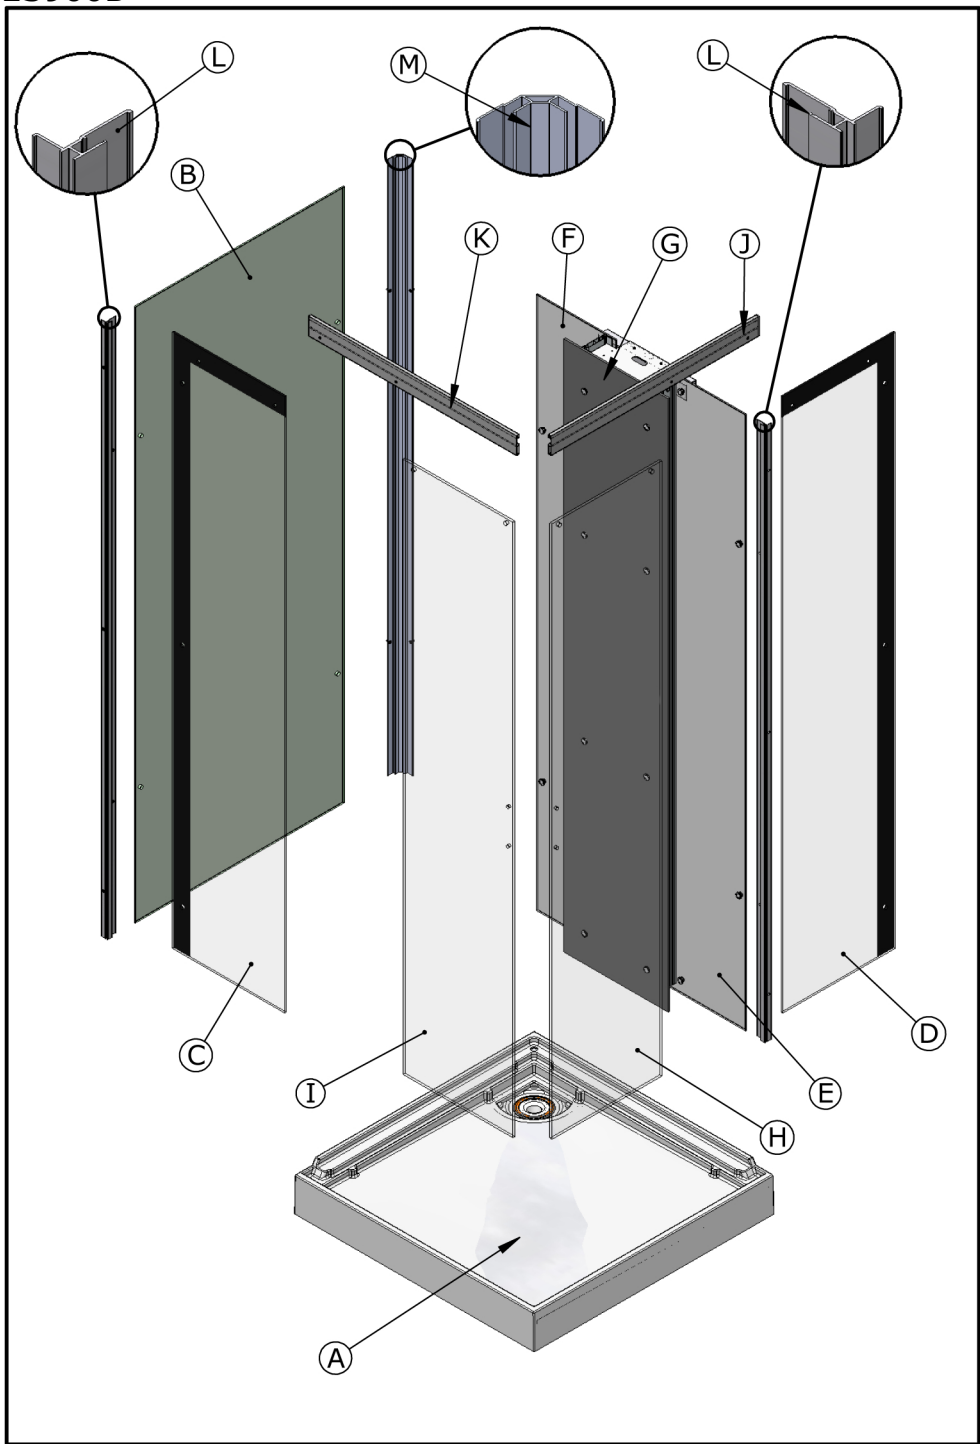


GB Check installation steps :

p.8 - p.12 - p.36











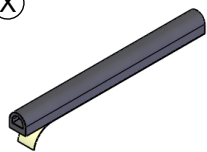
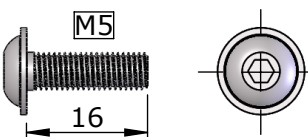
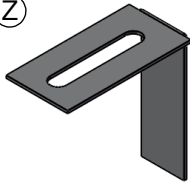
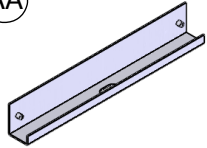
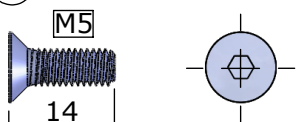
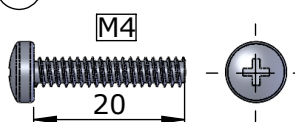



PACKAGE CODES (see marks on page 2)




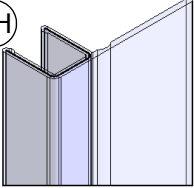
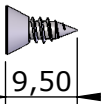
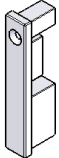
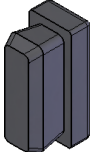
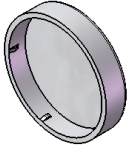


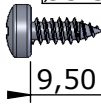
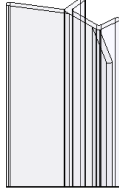
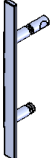
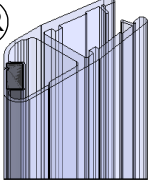
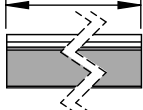
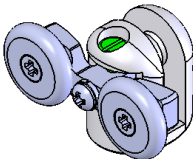
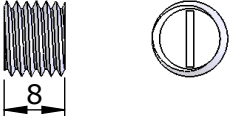
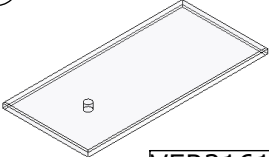
REP	80x80	90x90
A	REC204	REC203
B	C5077E	C5072E
C+D	C7741E	C6049E
E+F	C7202E	C7215E
G	CP850	
H+I	C4843E	C4841E
J+K	5902	
L	5934	
M	5933	

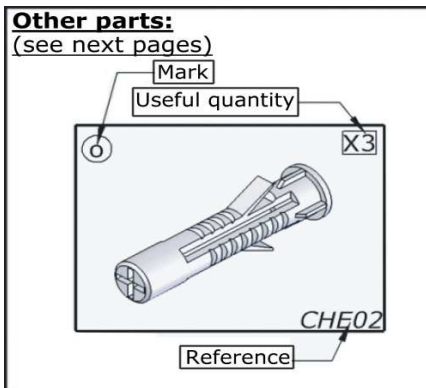


DES900B
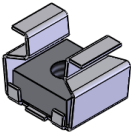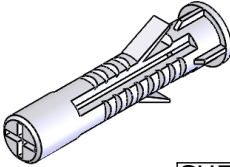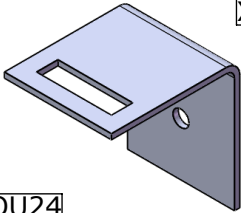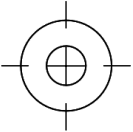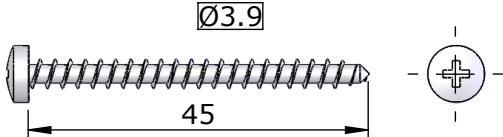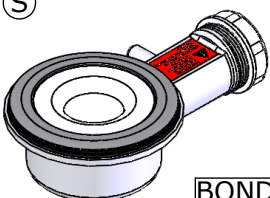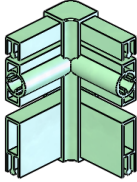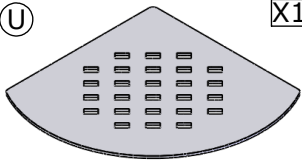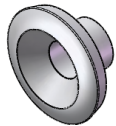
<p>(N) X3</p>  <p>ECR46</p>	<p>(O) X3</p>  <p>CHE02</p>	<p>(P) X3</p>  <p>EQU24</p>
<p>(Q) X5</p>  <p>1=1 RON51</p>	<p>(R) X3</p>  <p>Ø3.9 45</p> <p>1=1 VIS17</p>	
<p>(S) X1</p>  <p>BOND16</p>	<p>(T) X1</p>  <p>PPL353</p>	<p>(U) X1</p>  <p>TOL12</p>
<p>(V) X22</p>  <p>ENT19</p>	<p>(W) X18</p>  <p>M5 20</p> <p>1=1 VIS10</p>	<p>(X) X2</p>  <p>J446</p>
<p>(Y) X3</p>  <p>M5 16</p> <p>1=1 VIS195</p>	<p>(Z) X3</p>  <p>EQU50</p>	<p>(AA) X2</p>  <p>SUP63</p>
<p>(AB) X4</p>  <p>M5 14</p> <p>1=1 VIS159</p>	<p>(AC) X4</p>  <p>M4 20</p> <p>1=1 VIS09</p>	<p>(AD) X4</p>  <p>ECR14</p>






The quantities given are what are required for the installation. There may be some surplus parts in the package provided.
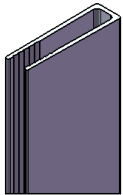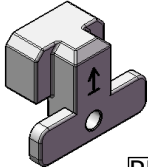
<p>(AE)  X2</p> <p>PFL42</p>	<p>(AF)  X1</p> <p>PPL550</p>	<p>(AG)  X1</p> <p>PPL523</p> <p>PPL522</p>
<p>(AH)  X2</p> <p>LG=1925mm J418</p>	<p>(AI)  X2</p> <p>$\varnothing 3.5$ 9,50 1=1</p> <p>VIS22</p>	<p>(AJ)  X2</p> <p>PPL520</p>
<p>(AK)  X2</p> <p>BUT22</p>	<p>(AL)  X22</p> <p>CAP07</p>	<p>(AM)  X4</p> <p>ECR31</p>
<p>(AN)  X2</p> <p>BUT20</p>	<p>(AO)  X4</p> <p>$\varnothing 3.5$ 9,50 1=1</p> <p>VIS01</p>	<p>(AP)  X2</p> <p>LG=1970mm J540</p>
<p>(AQ)  X2</p> <p>S0948</p>	<p>(AR)  X1</p> <p>LG=1995mm</p> <p>AI038 AI039</p>	<p>(AS)  X2</p> <p>80x80=345mm 90x90=393mm</p> <p>80x80=J440 90x90=J439</p>
<p>(AT)  X4</p> <p>ROU21</p>	<p>(AU)  X2</p> <p>M10 8 1=1</p> <p>VIS07</p>	<p>(AV)  X4</p> <p>VER2161</p>

DES900B

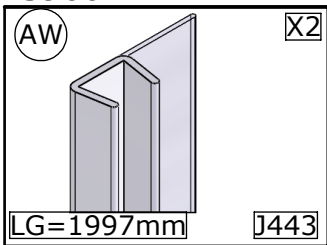


REQUIRED TOOLS

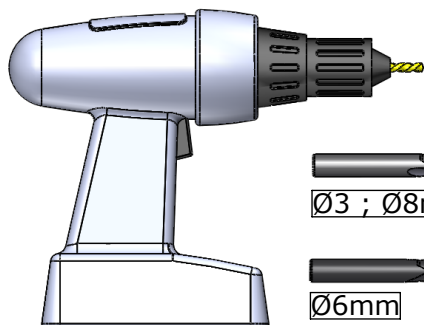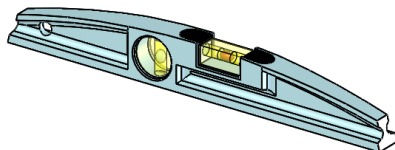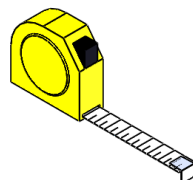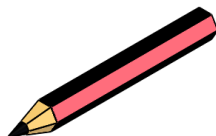

Ø3 ; Ø8mm



Ø6mm

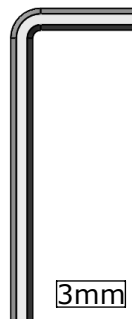



3mm



X2





The quantities given are what are required for the installation. There may be some surplus parts in the package provided.

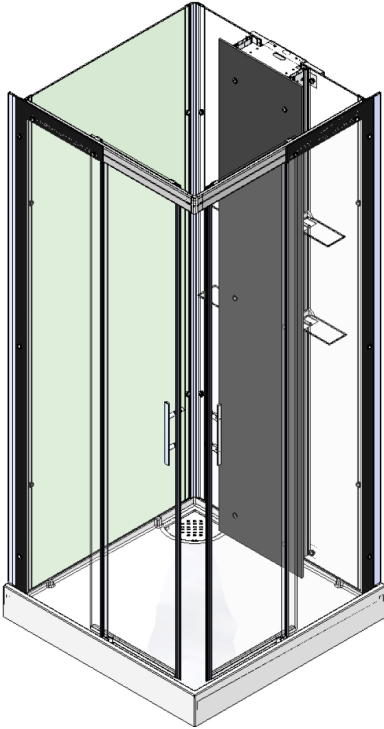
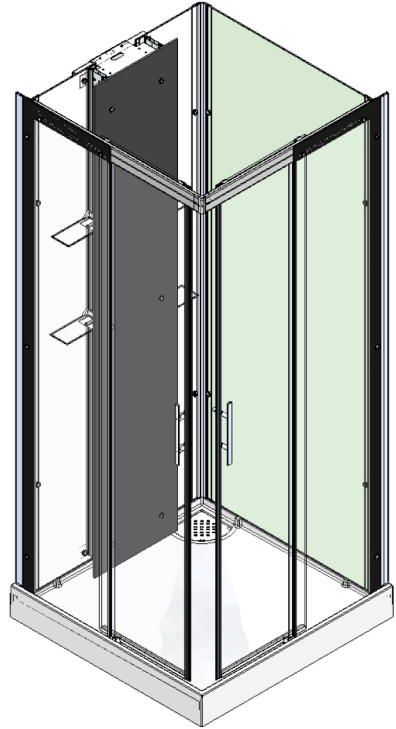
REVERSIBILITY**LEFT HAND****RIGHT HAND**

This cubicle can be installed either left or right hand. These installation instructions show a right hand installation.



01

Ø6 mm

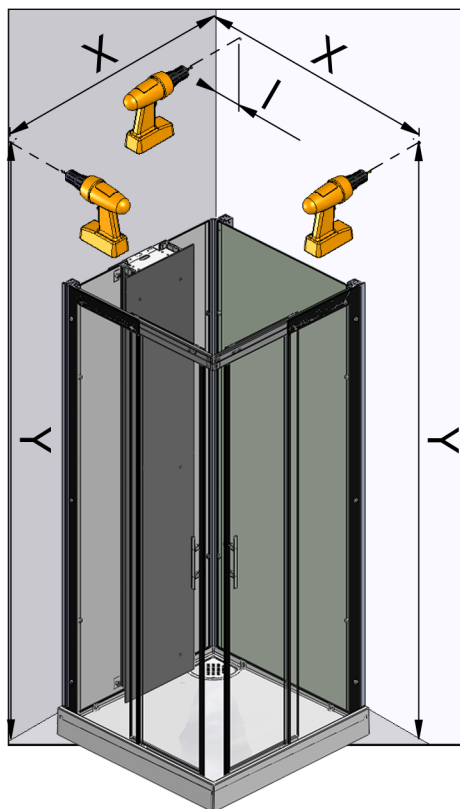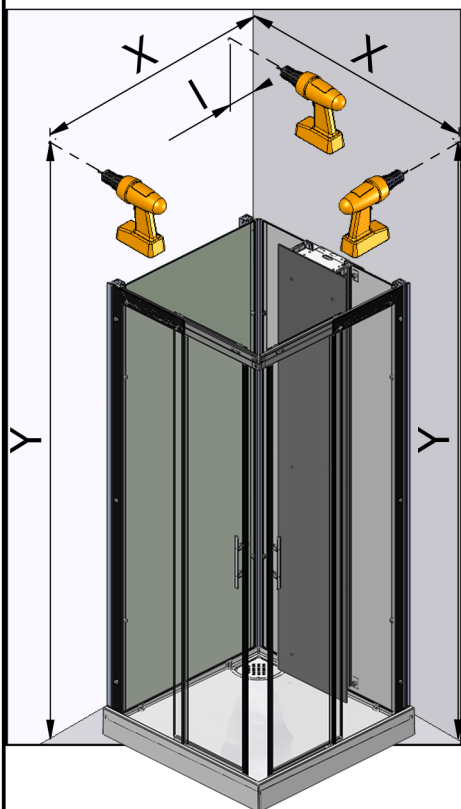


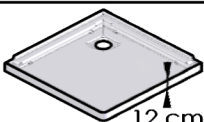
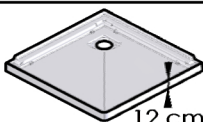
	80x80	90x90
X	74 cm	84 cm
Y	 206 cm	 207 cm
I	10 cm	

02

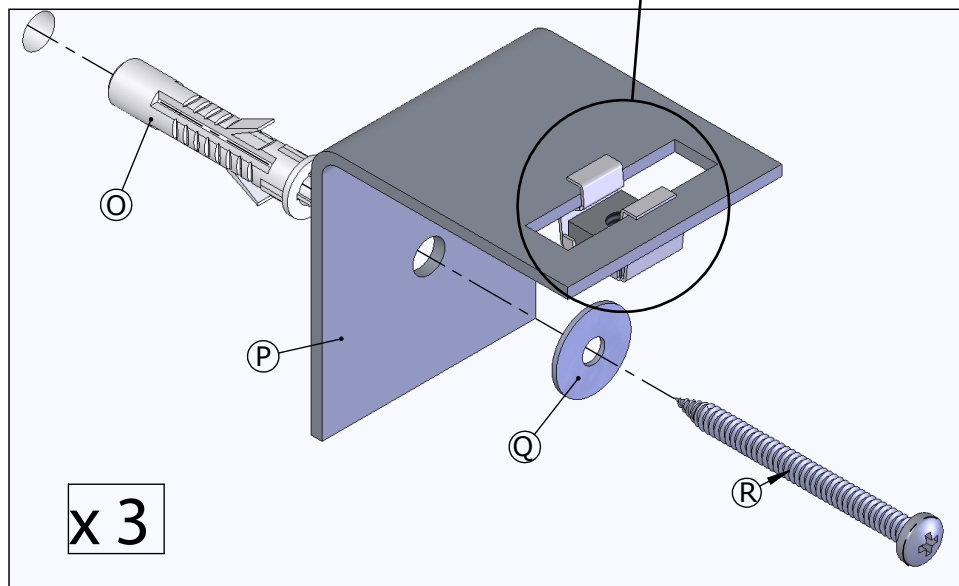
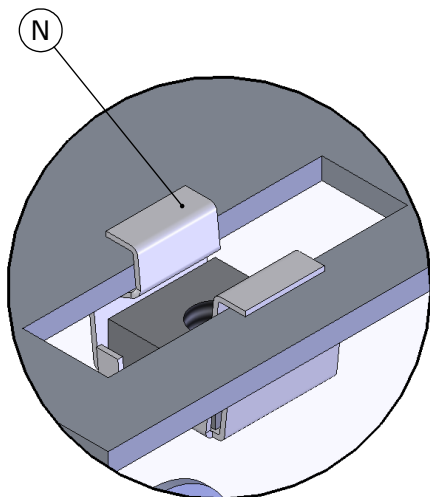


x 3


03

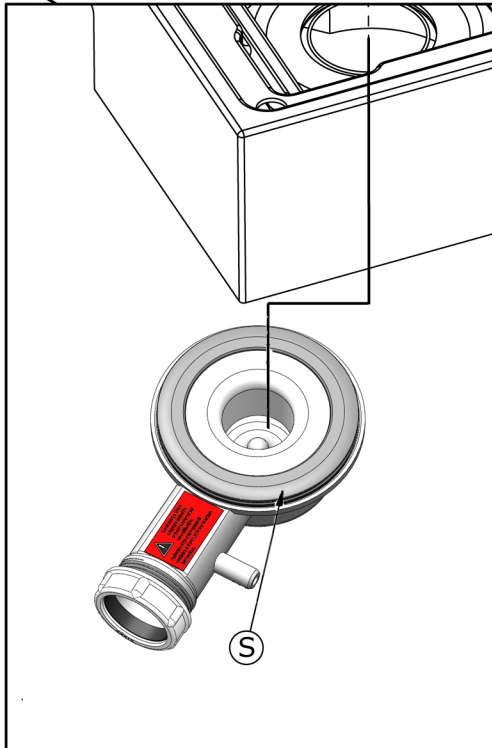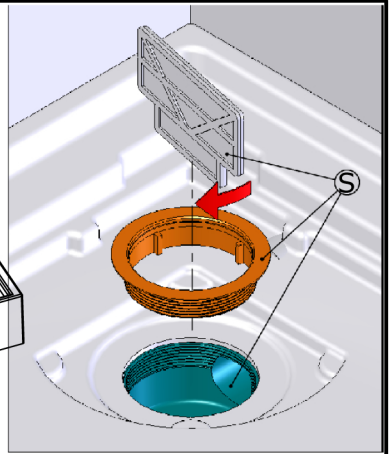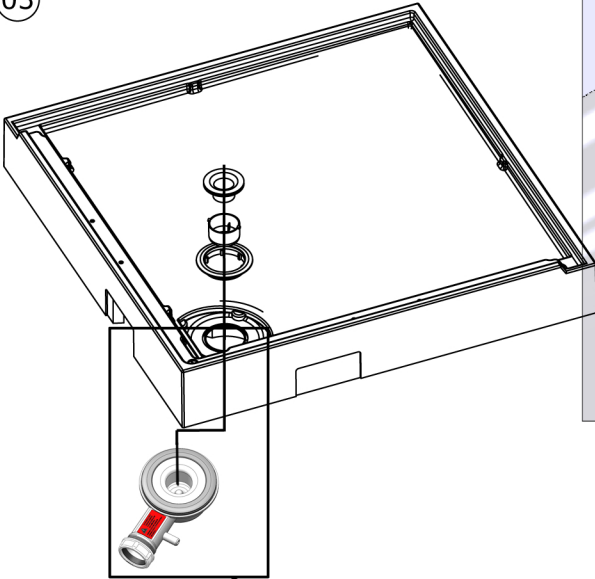


04

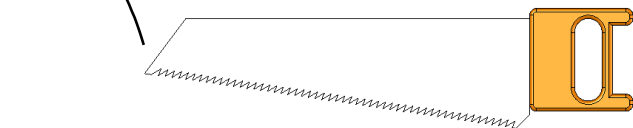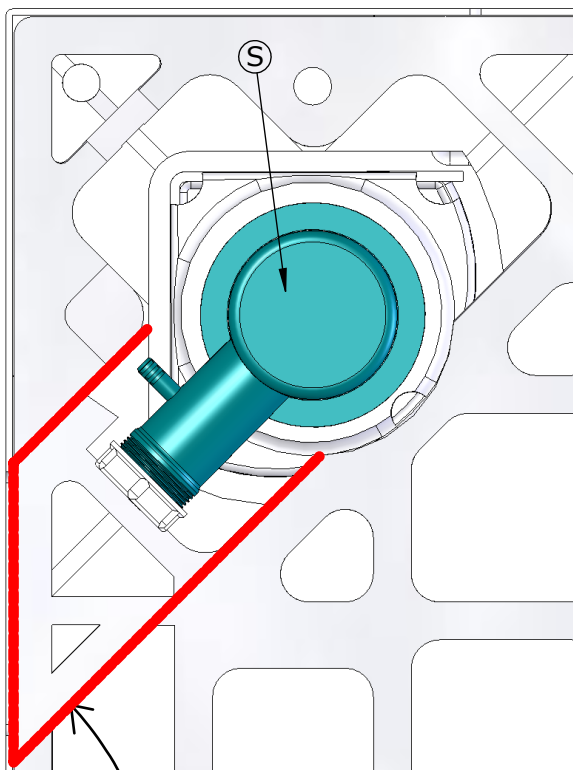


05

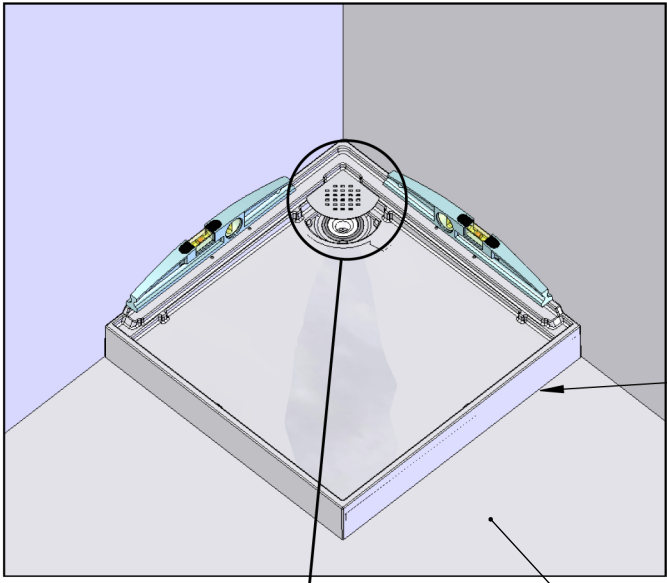



The underlying surface must be perfectly rigid

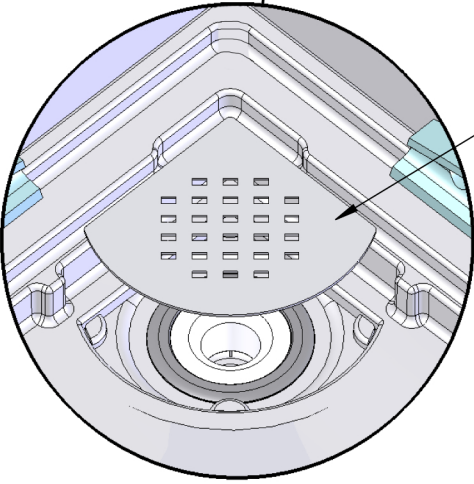



06 Screen printing on the outside

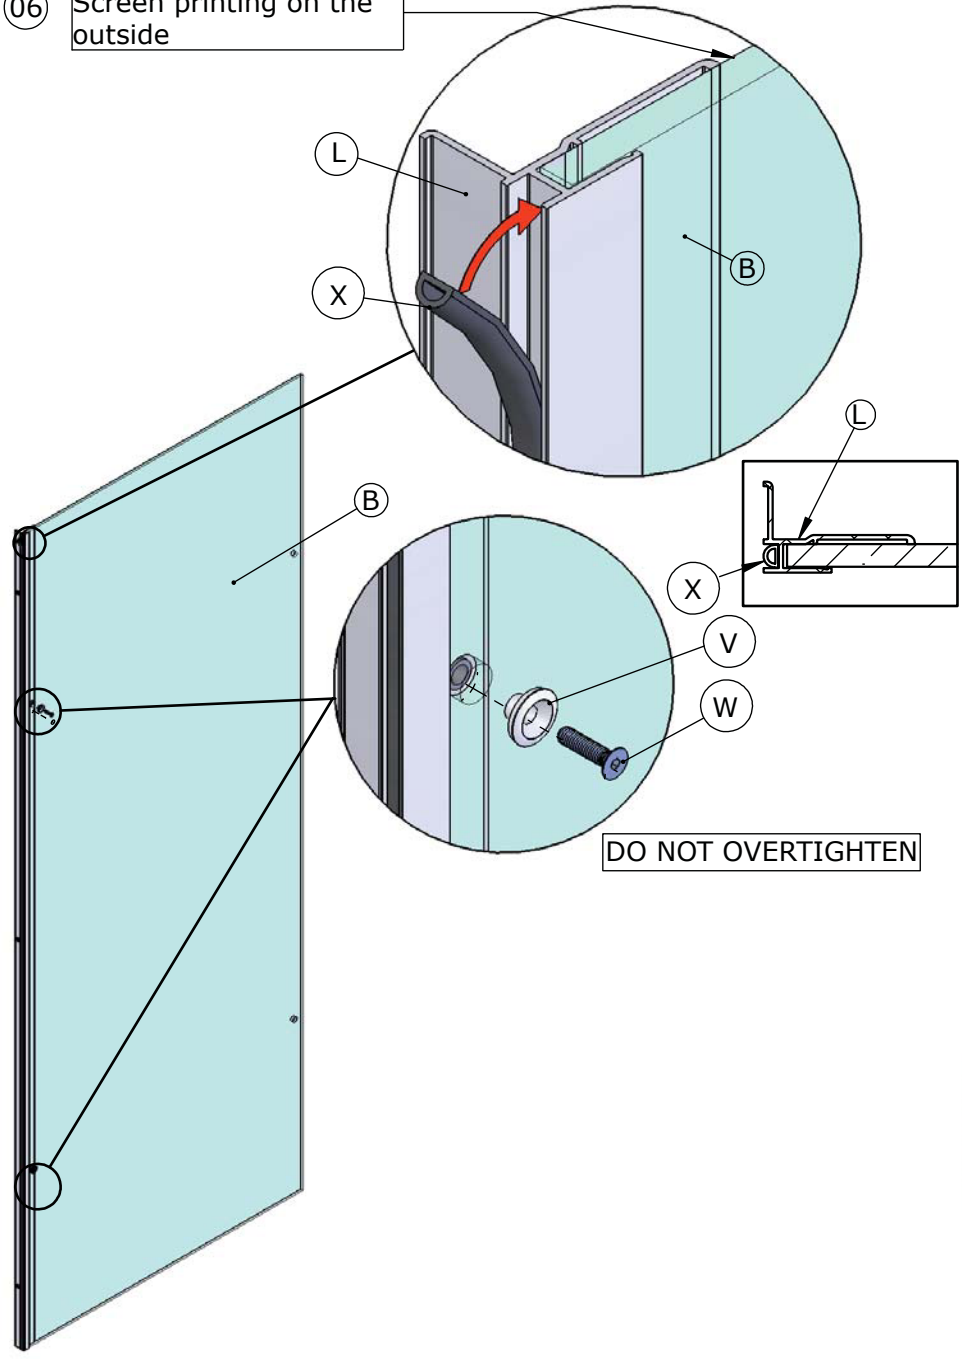

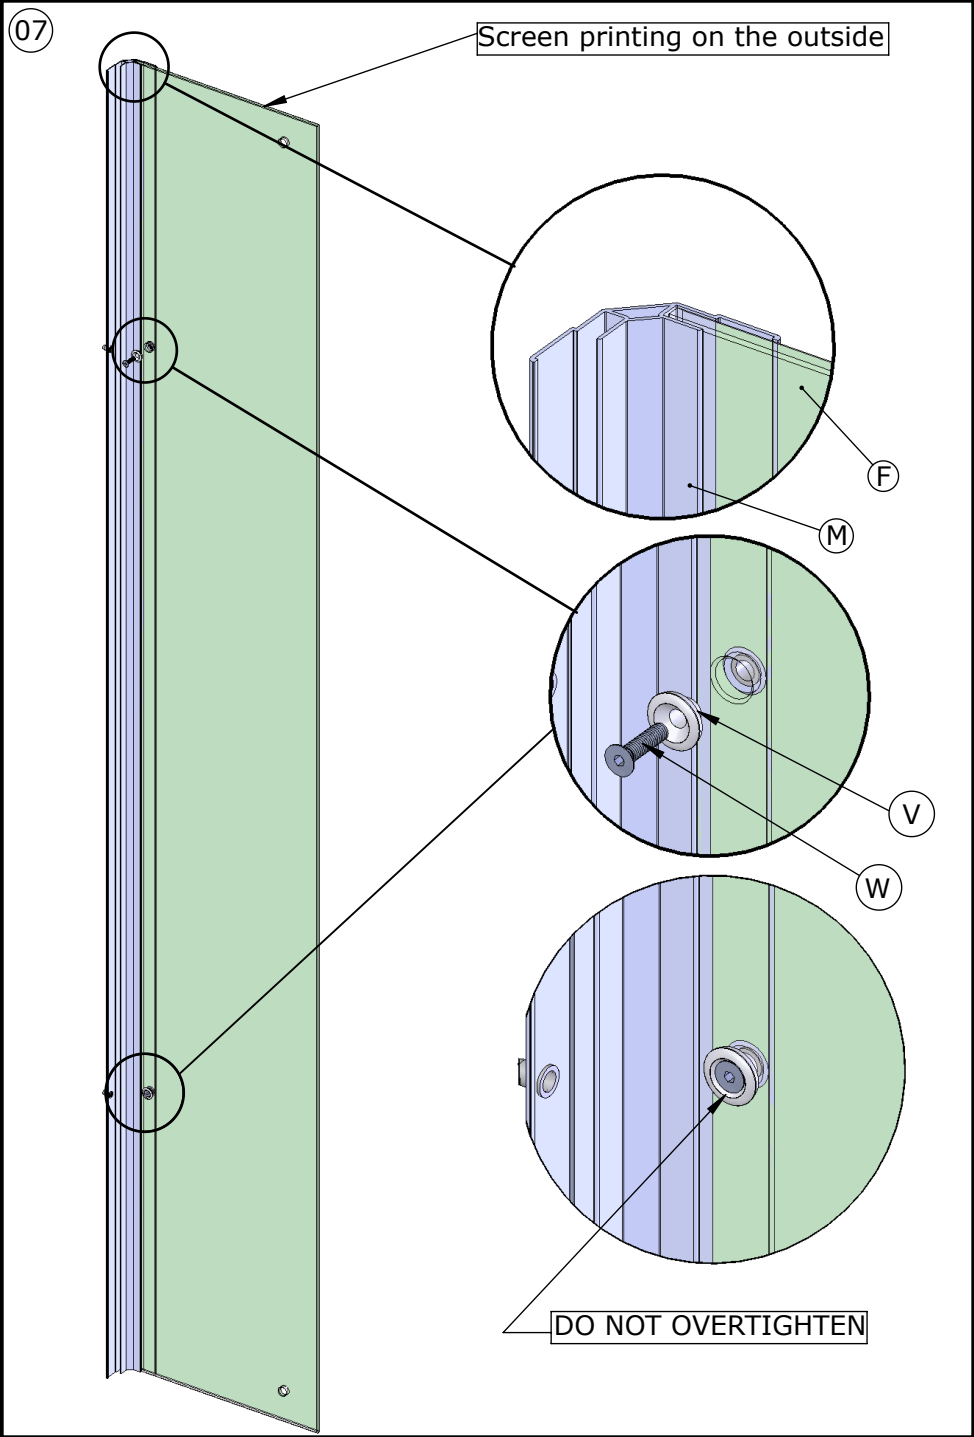




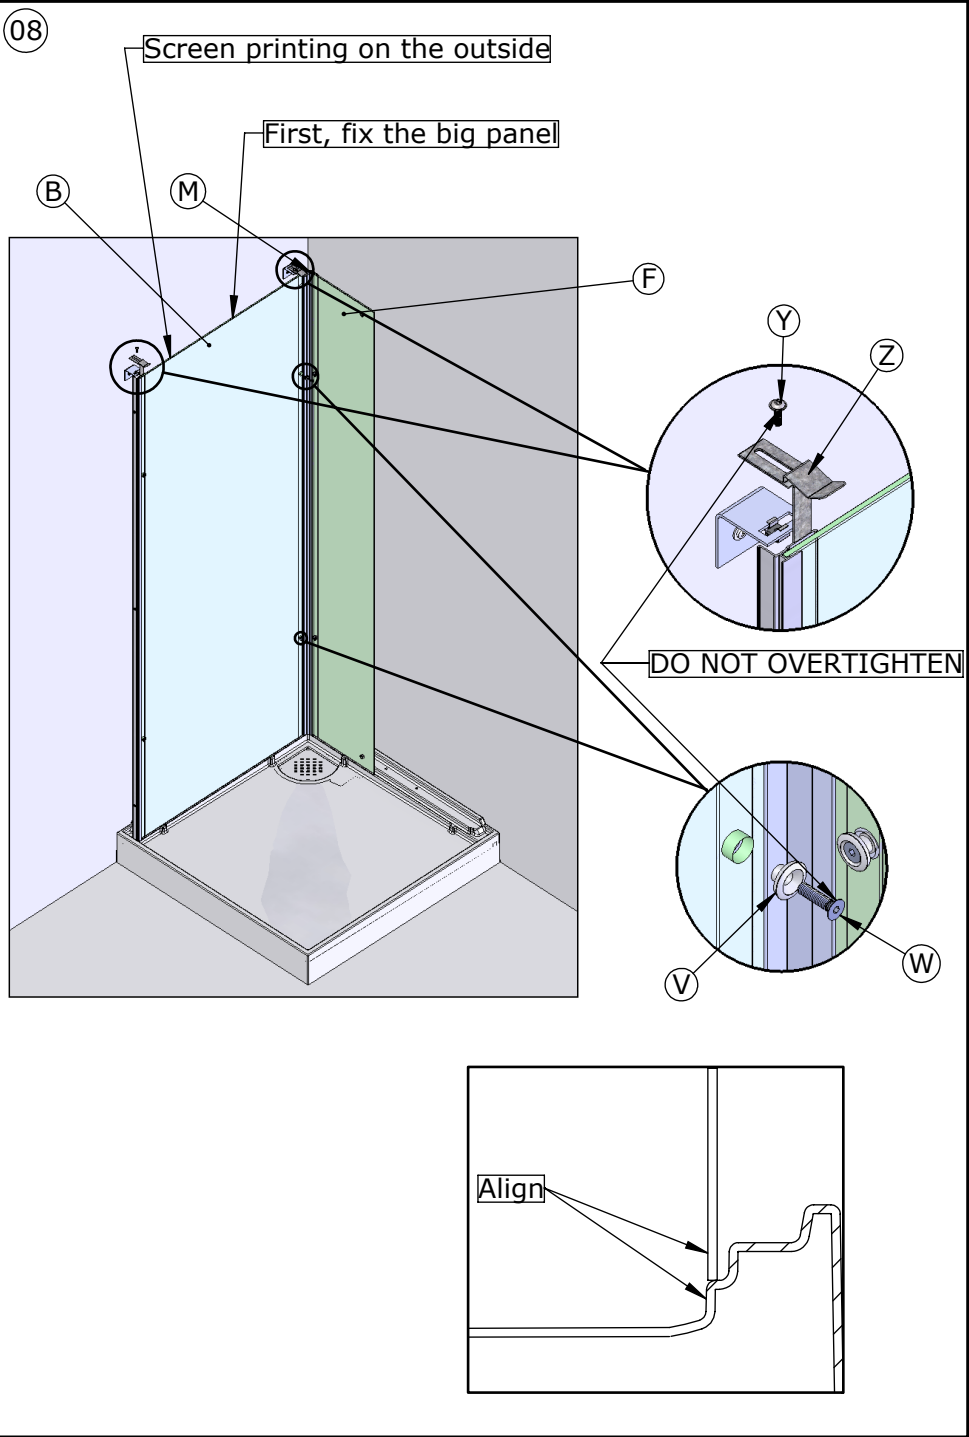


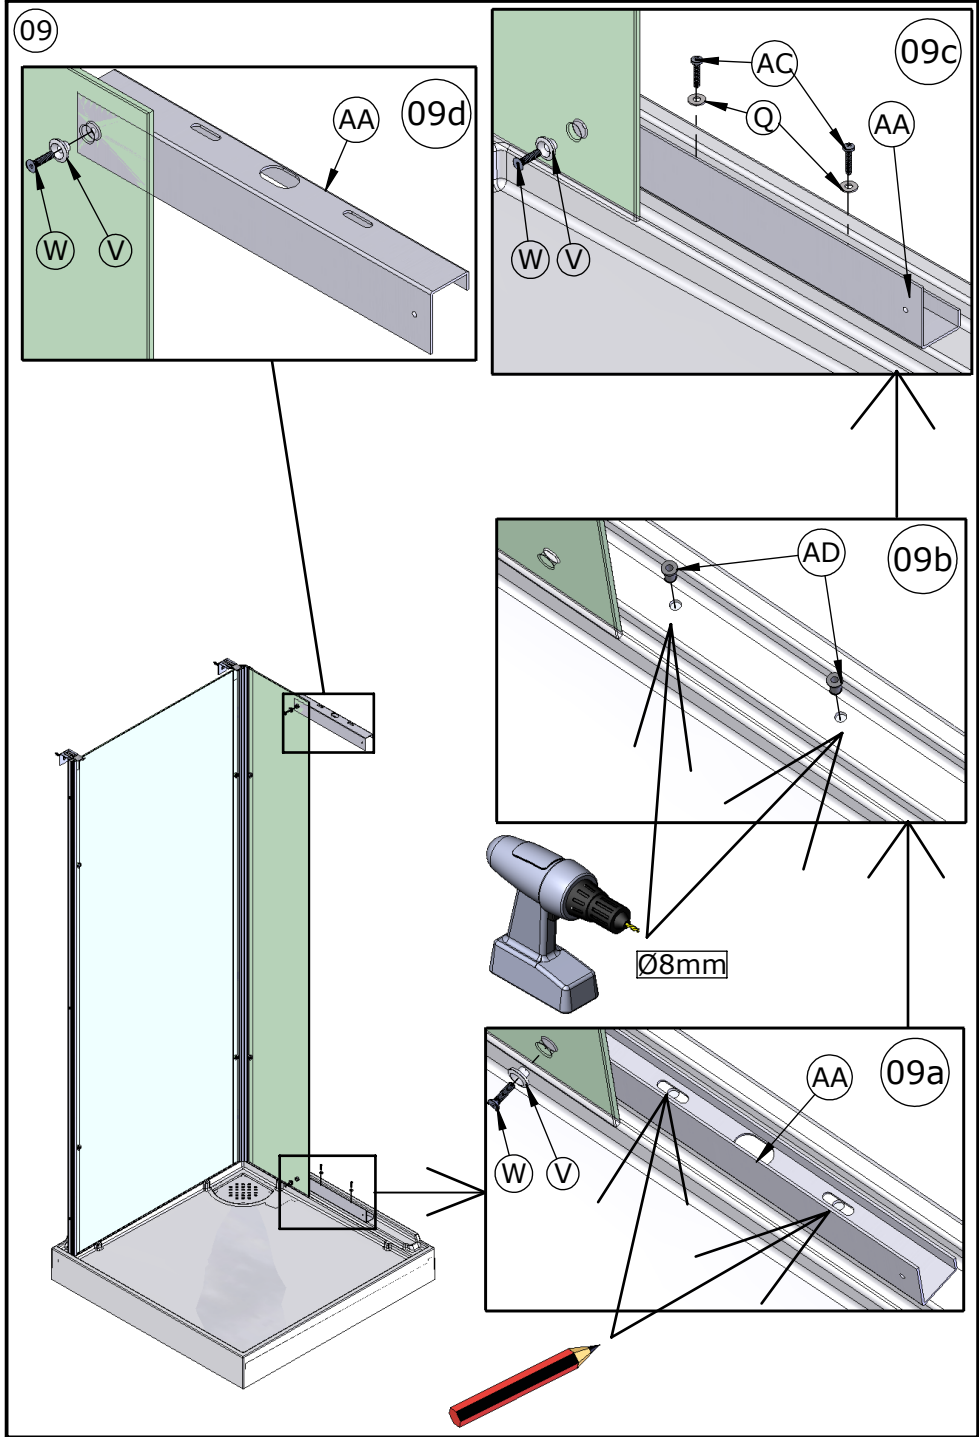

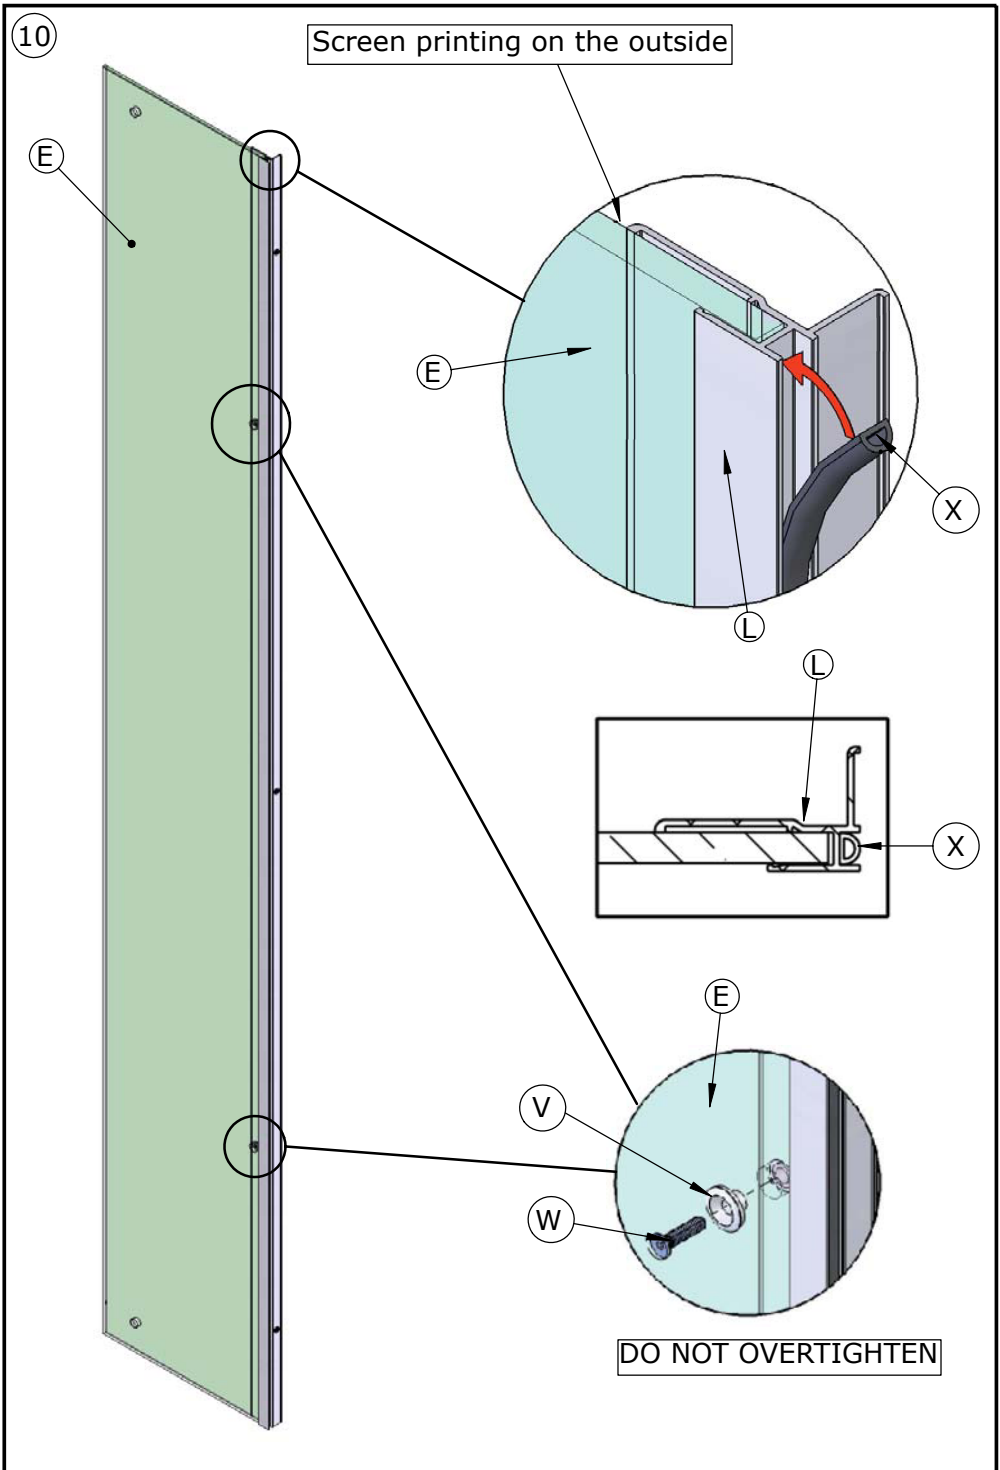

11


Screen printing on the outside

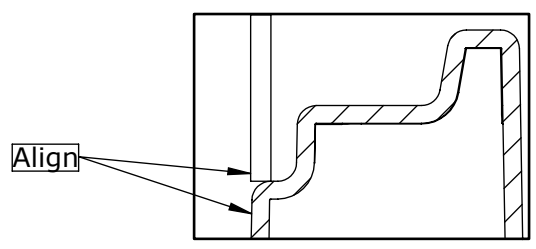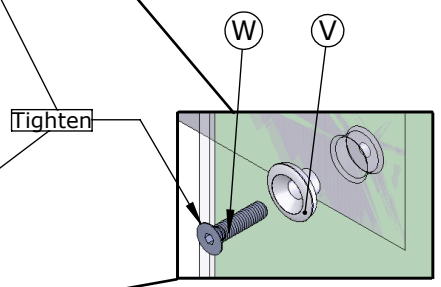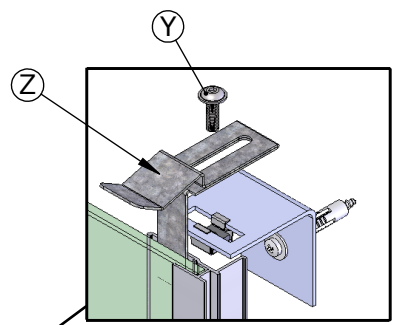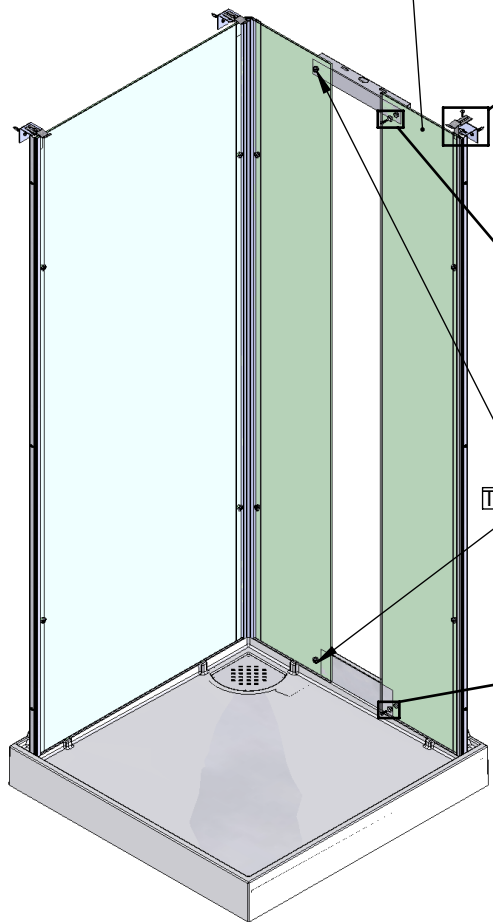

12


Screen printing inside

Drill holes on top

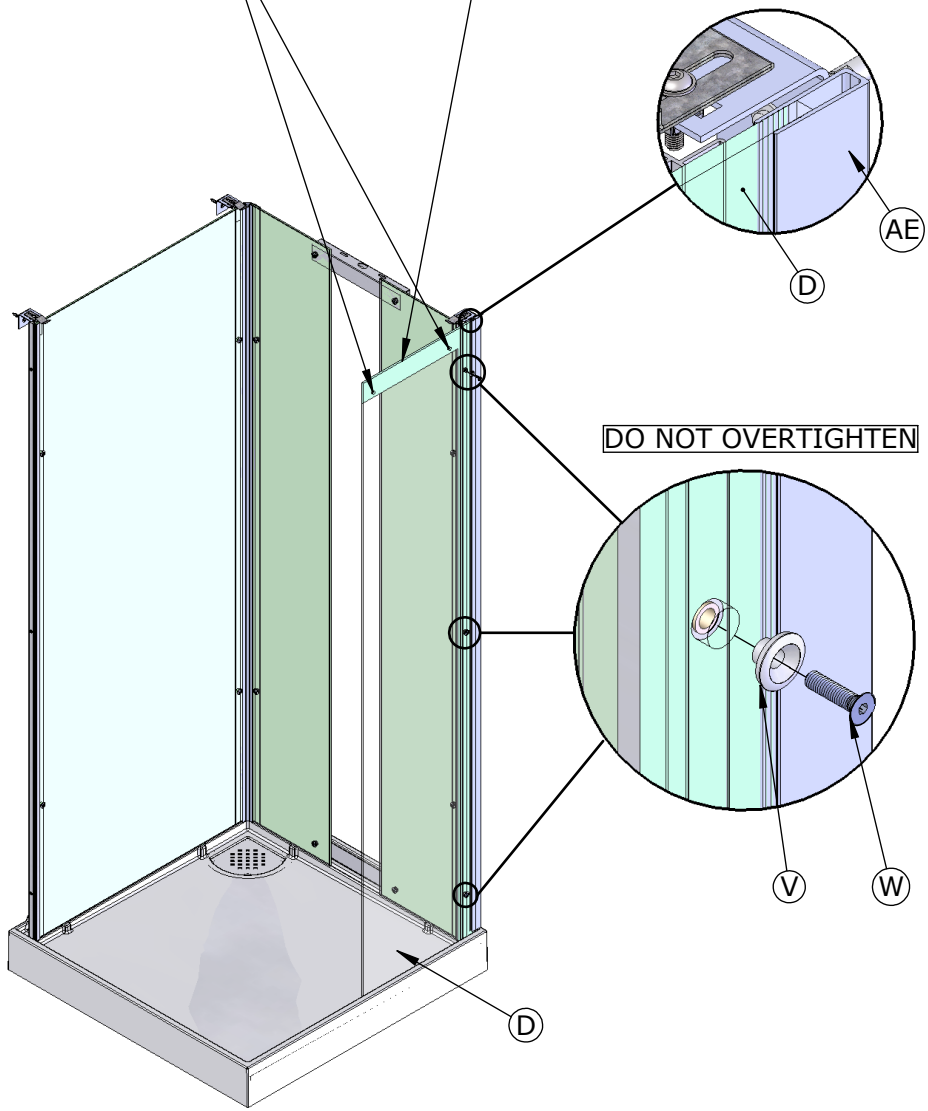

DO NOT OVERTIGHTEN

13

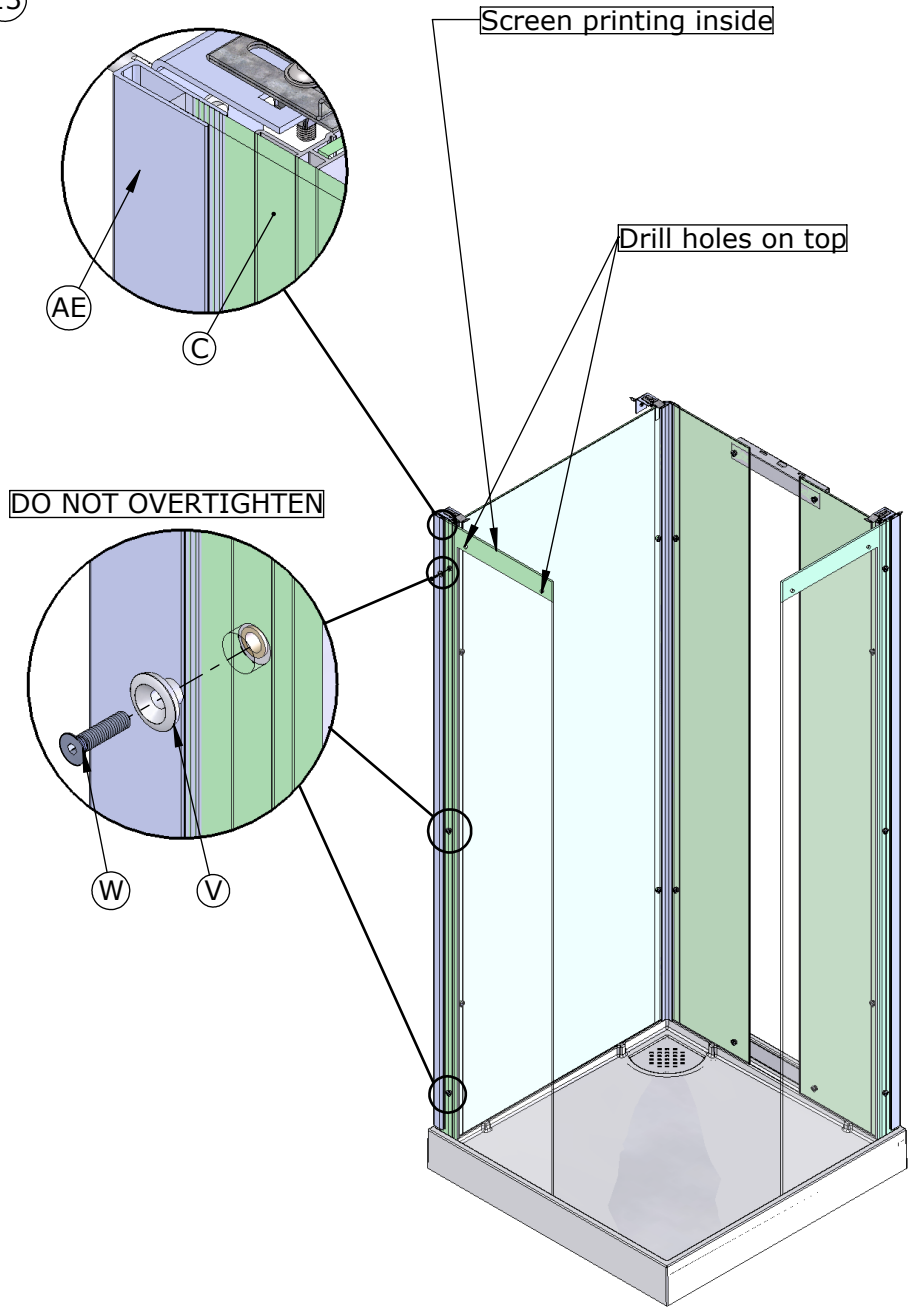


14

Template for the correct positioning

Ø8 mm

AF

C



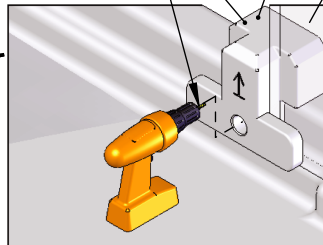


AC

AG


AD

C


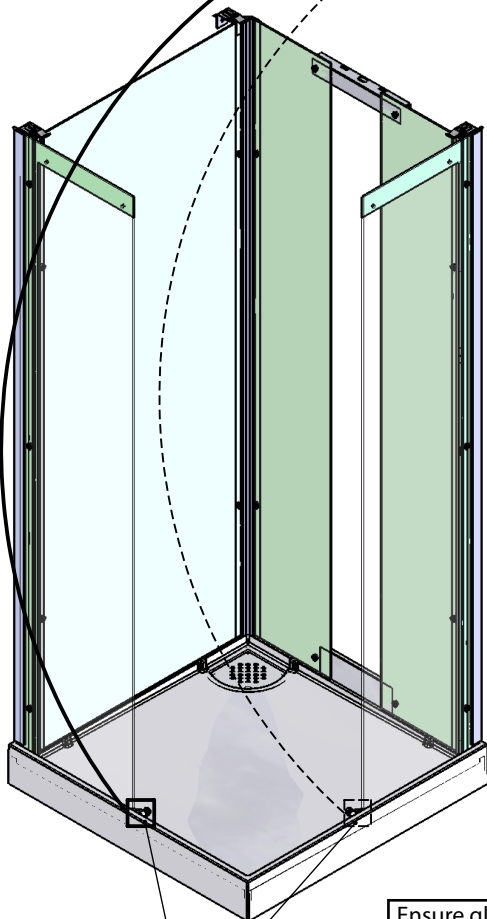
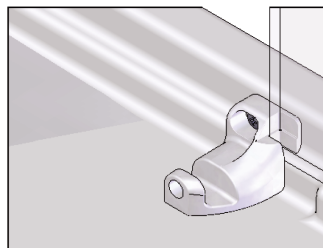
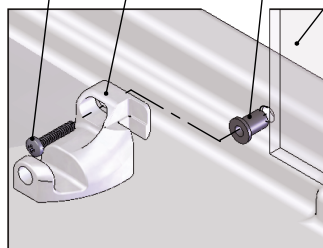


Ensure glass panels are fully home before drilling




AG

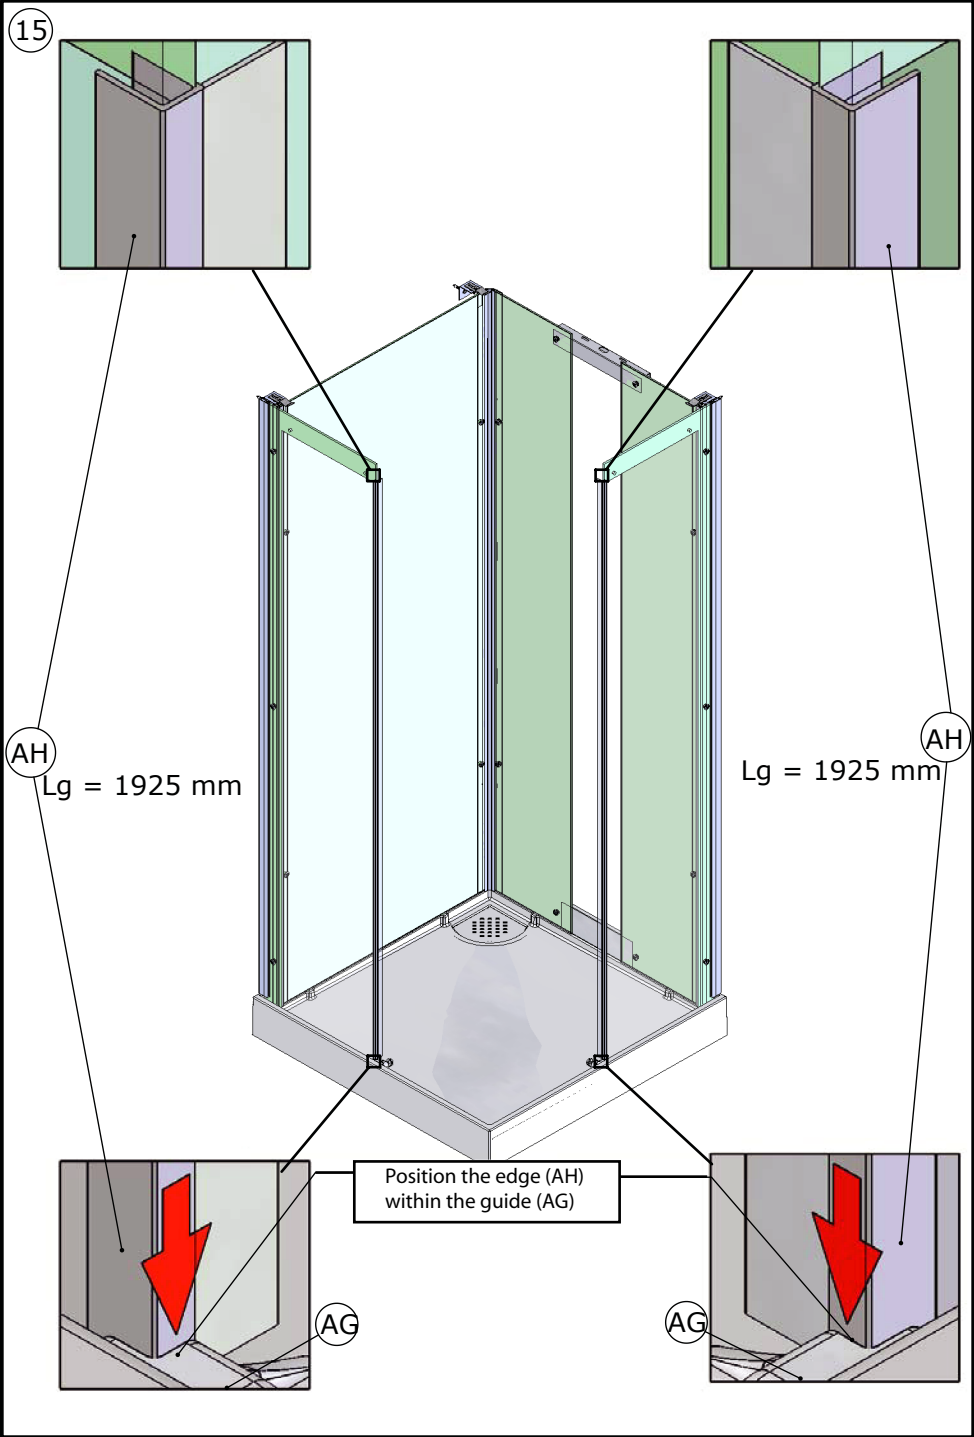


16

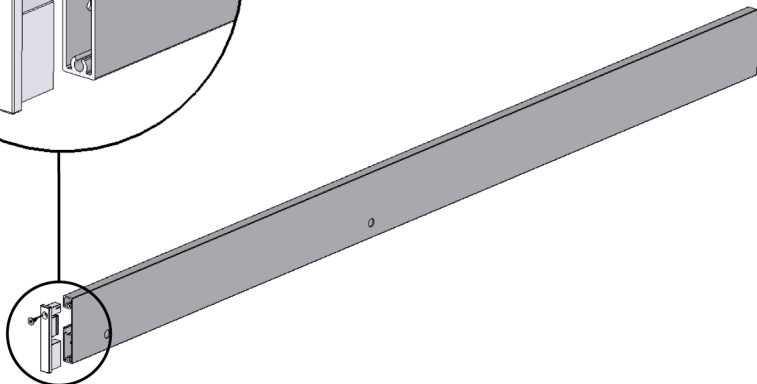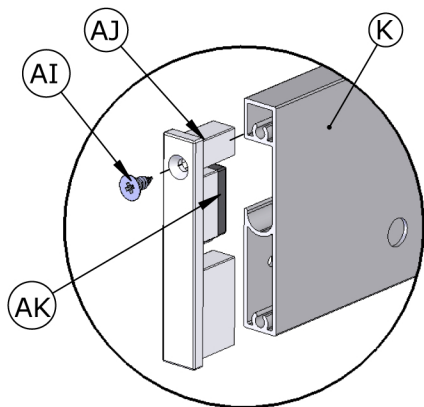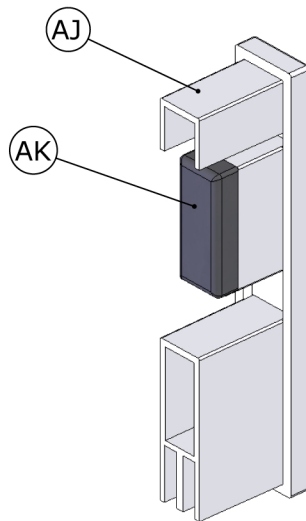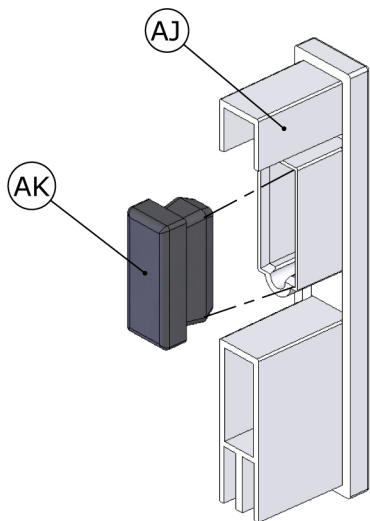


17

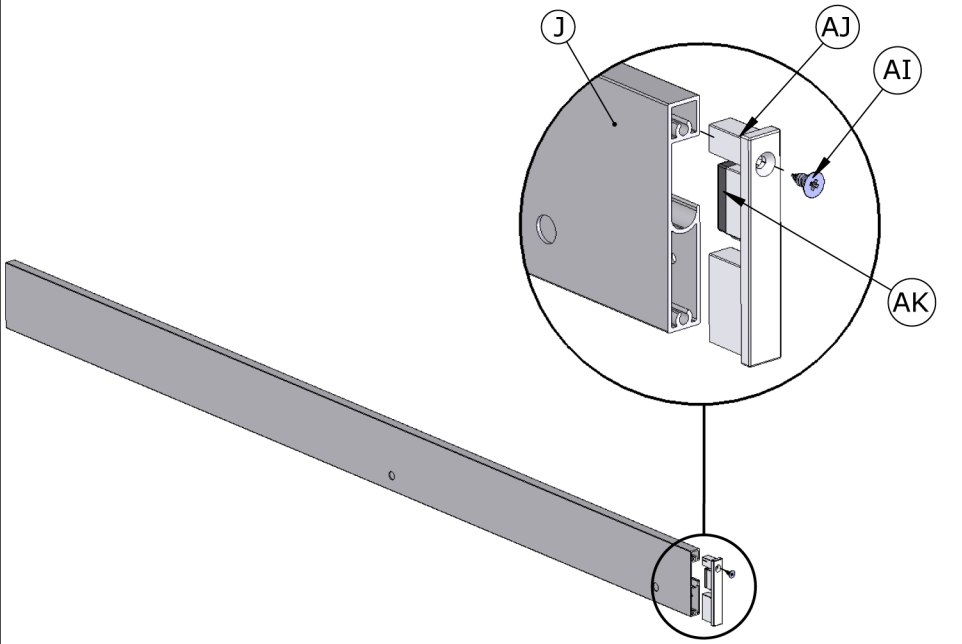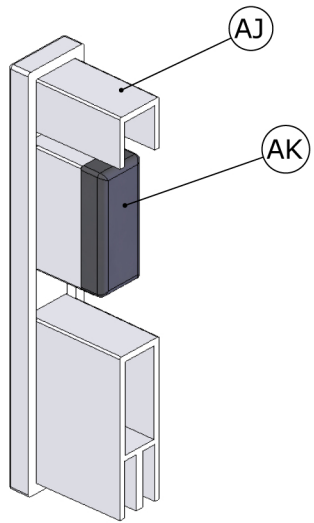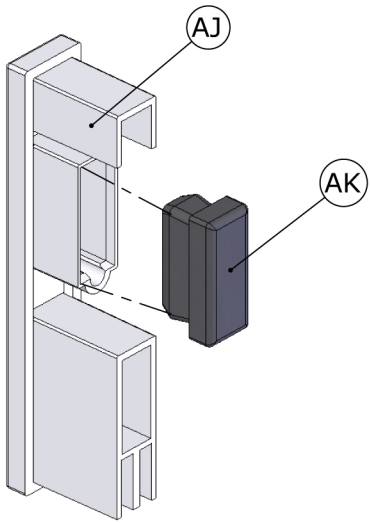


18

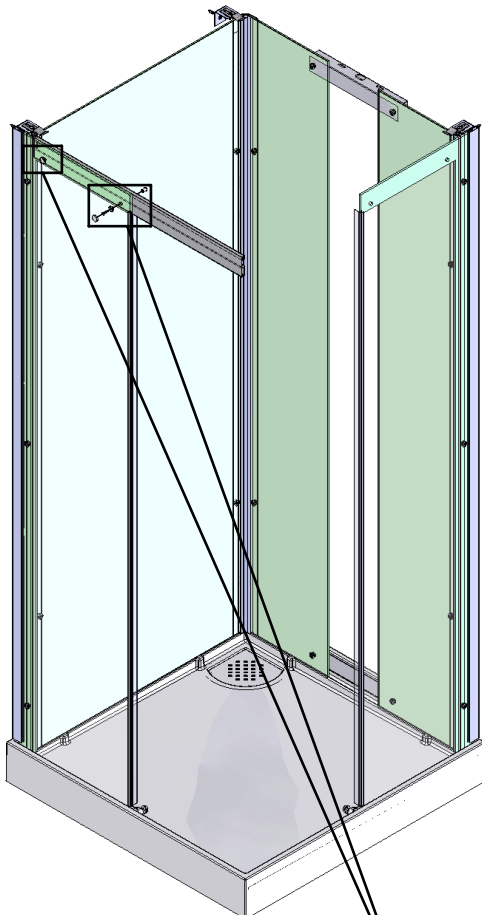


(K) is inside the shower

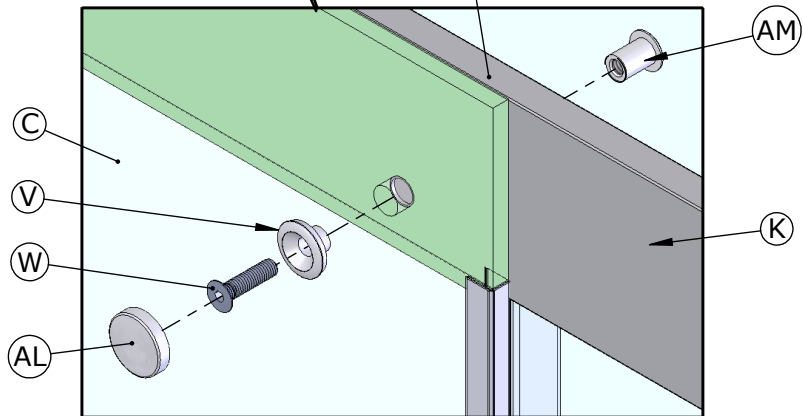



19

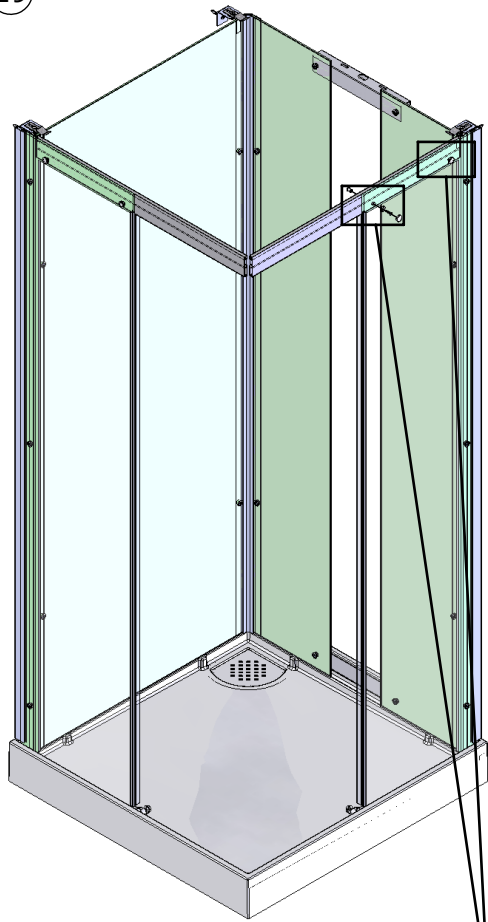


(J) is inside the shower

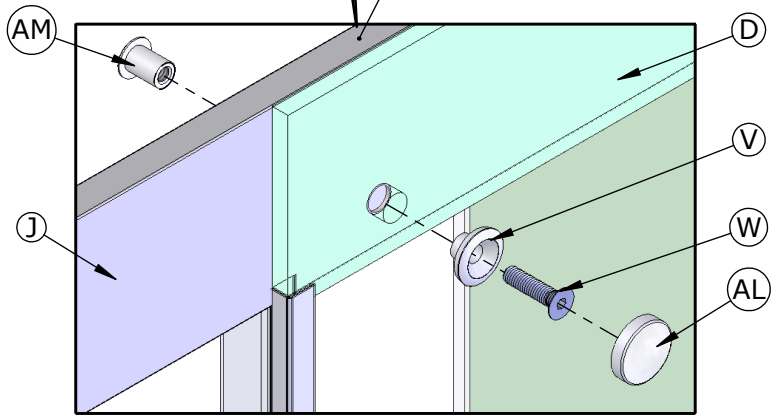




20

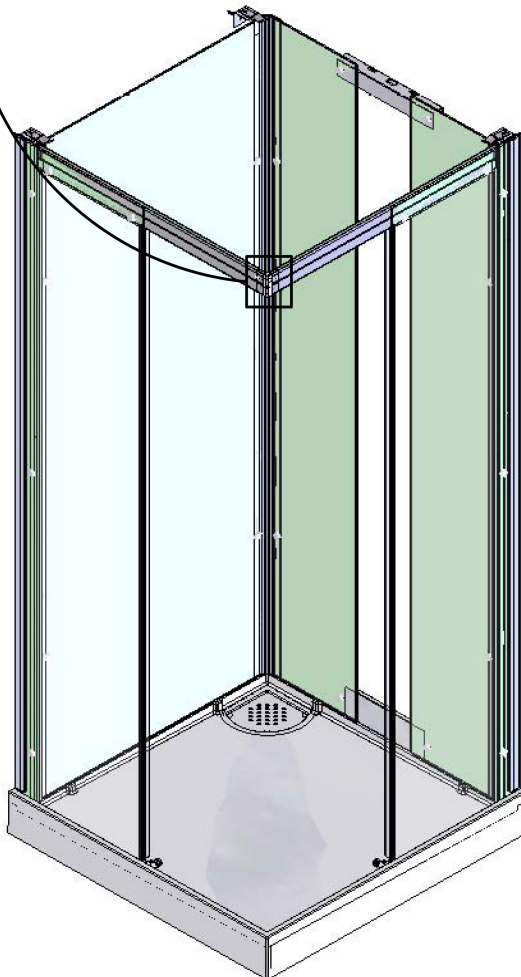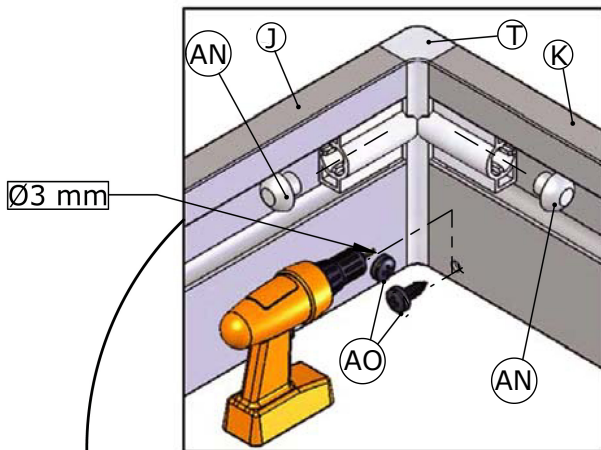

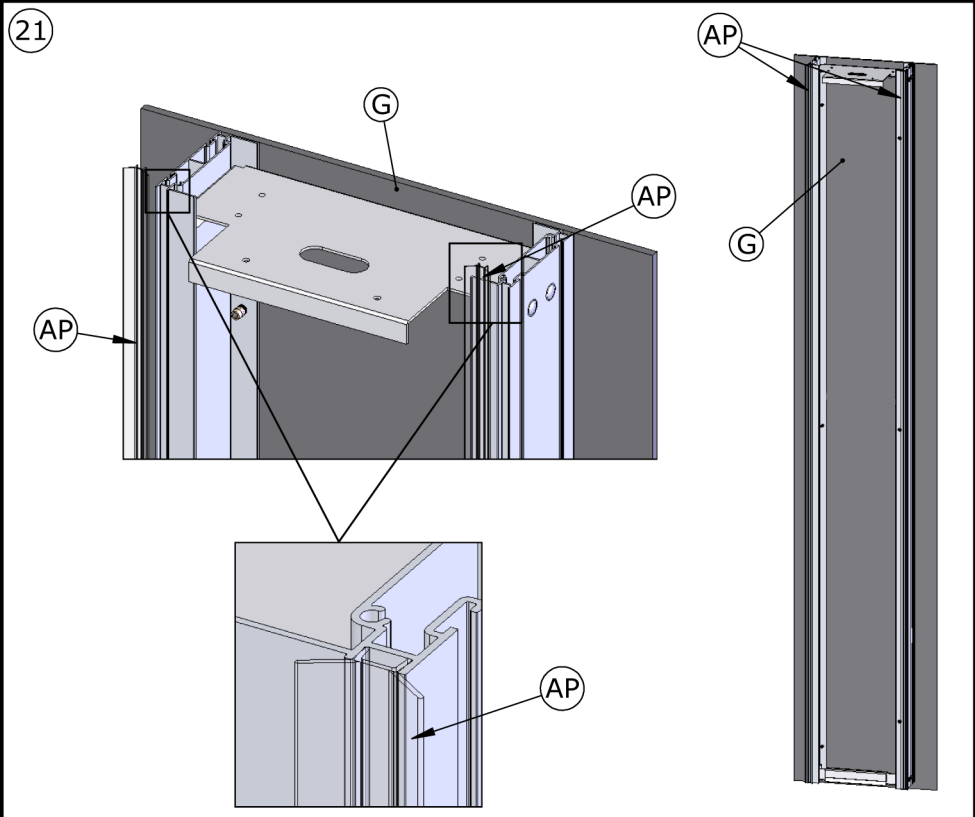


INSTALL THE TAP

22

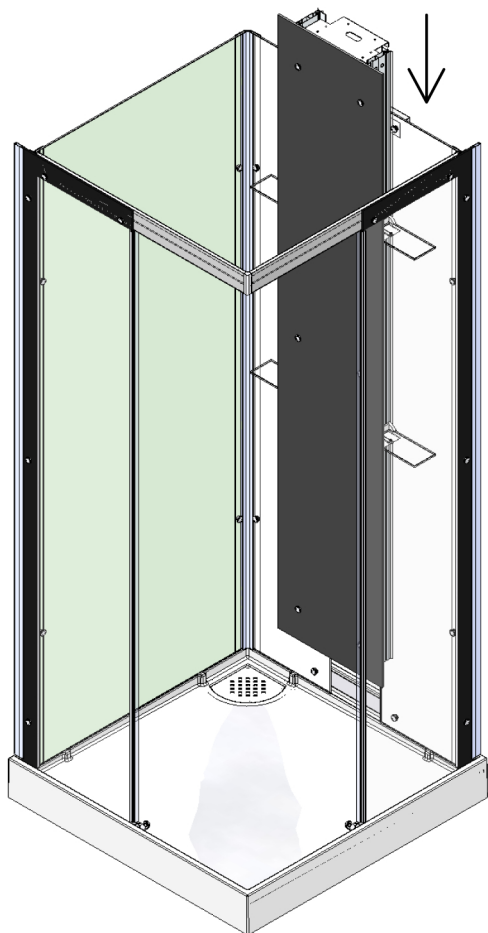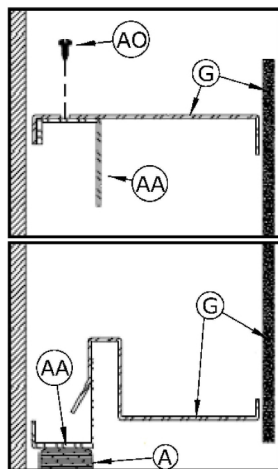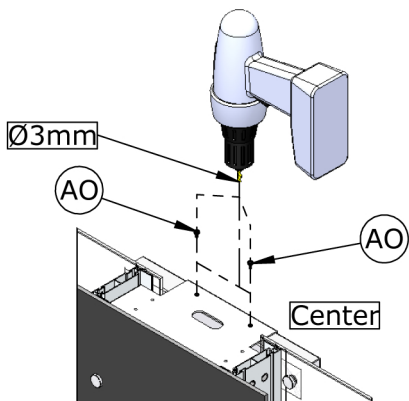


CONNECT THE
WATER SUPPLY
AND CHECK LEAKS
AT THIS POINT
AND CONNECT
EARTH CONECTOR


23

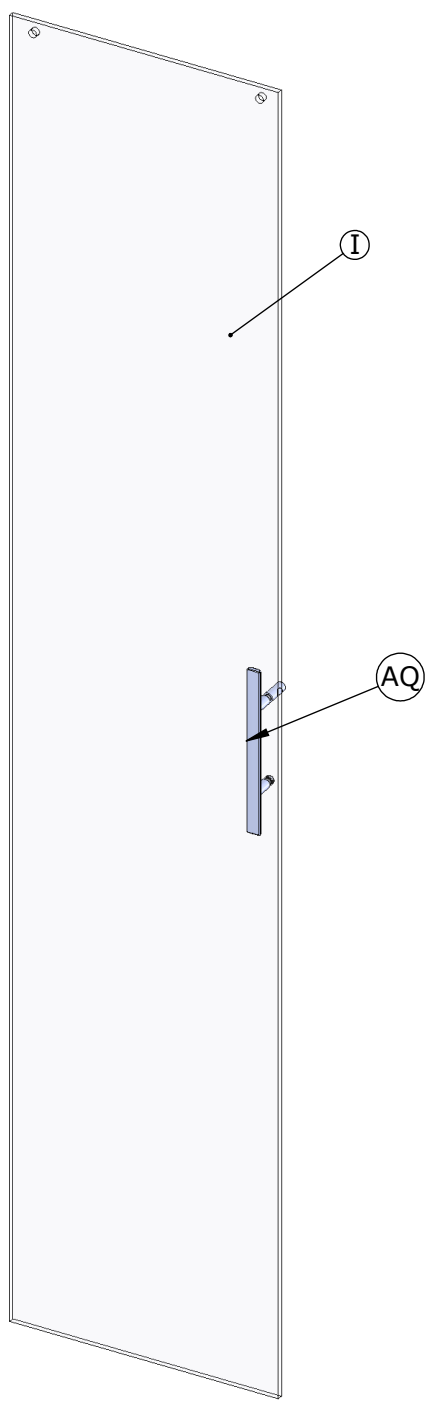


24

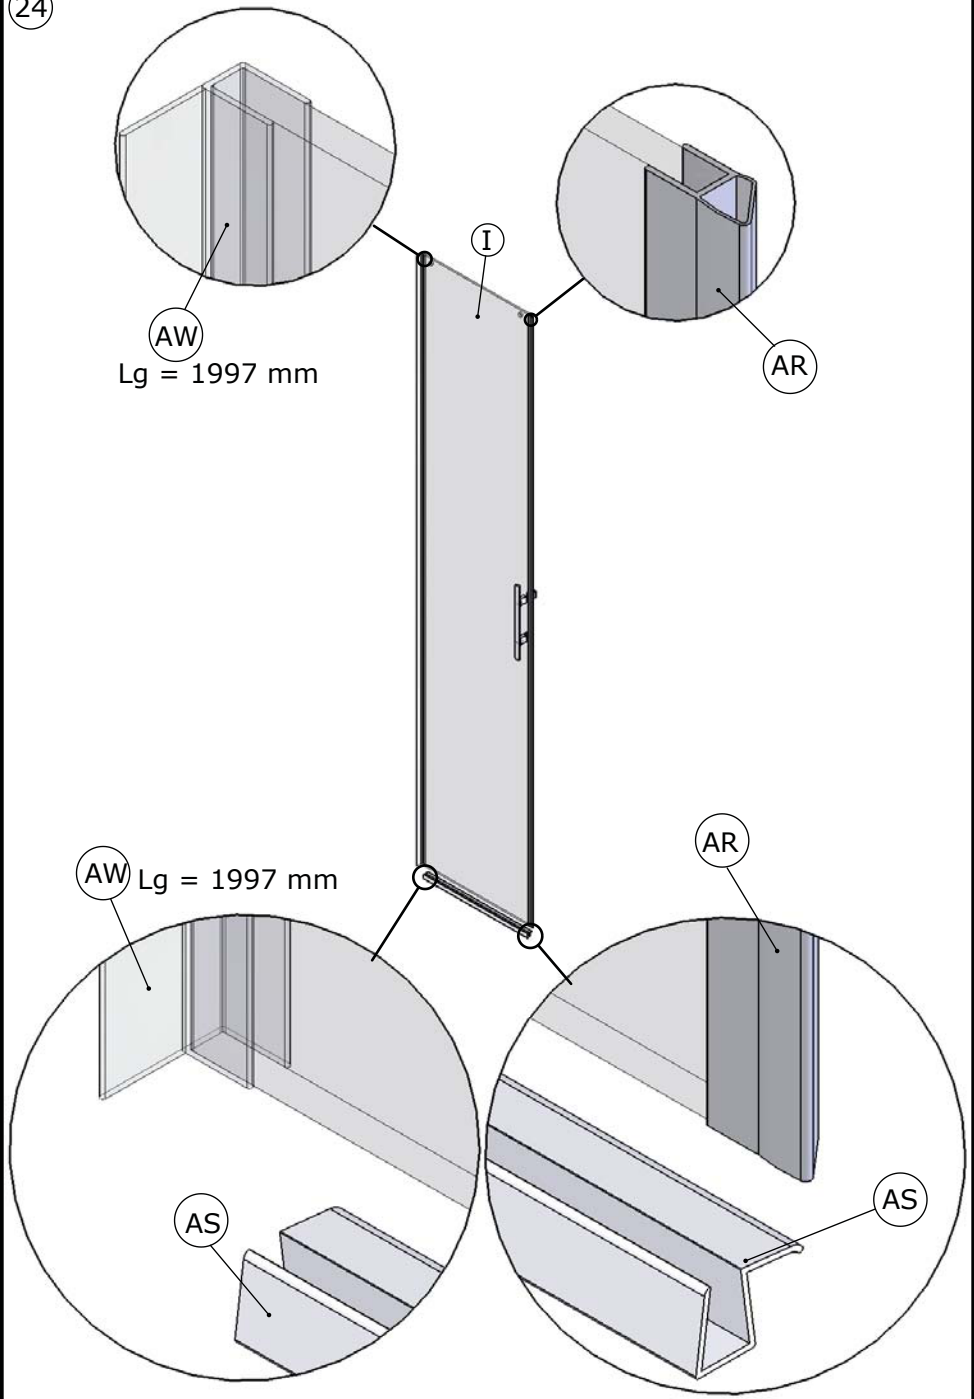



25

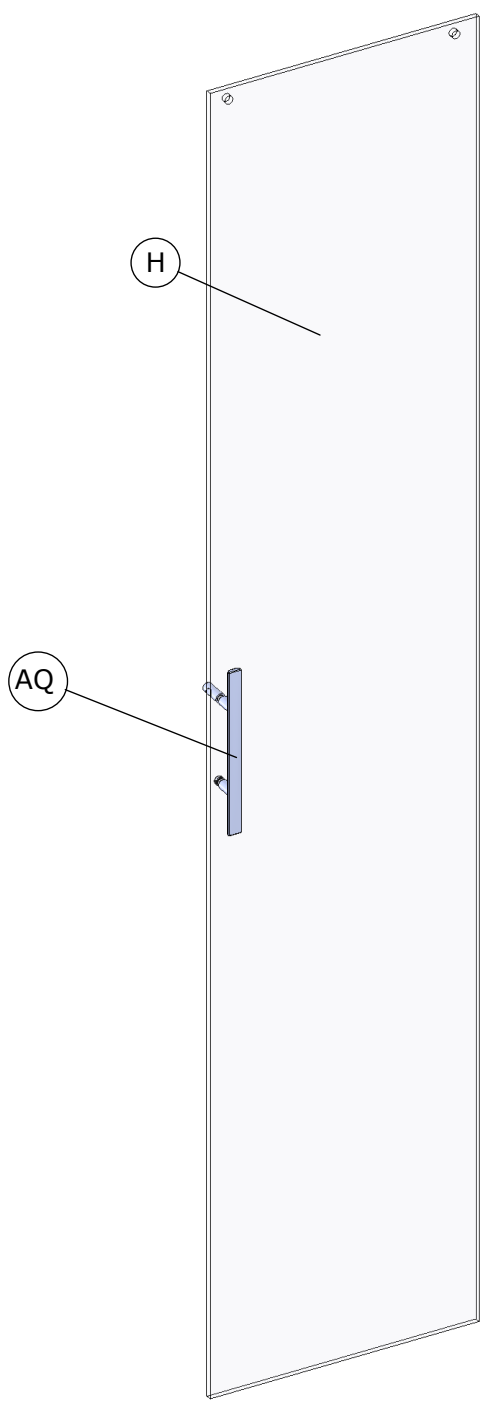

26



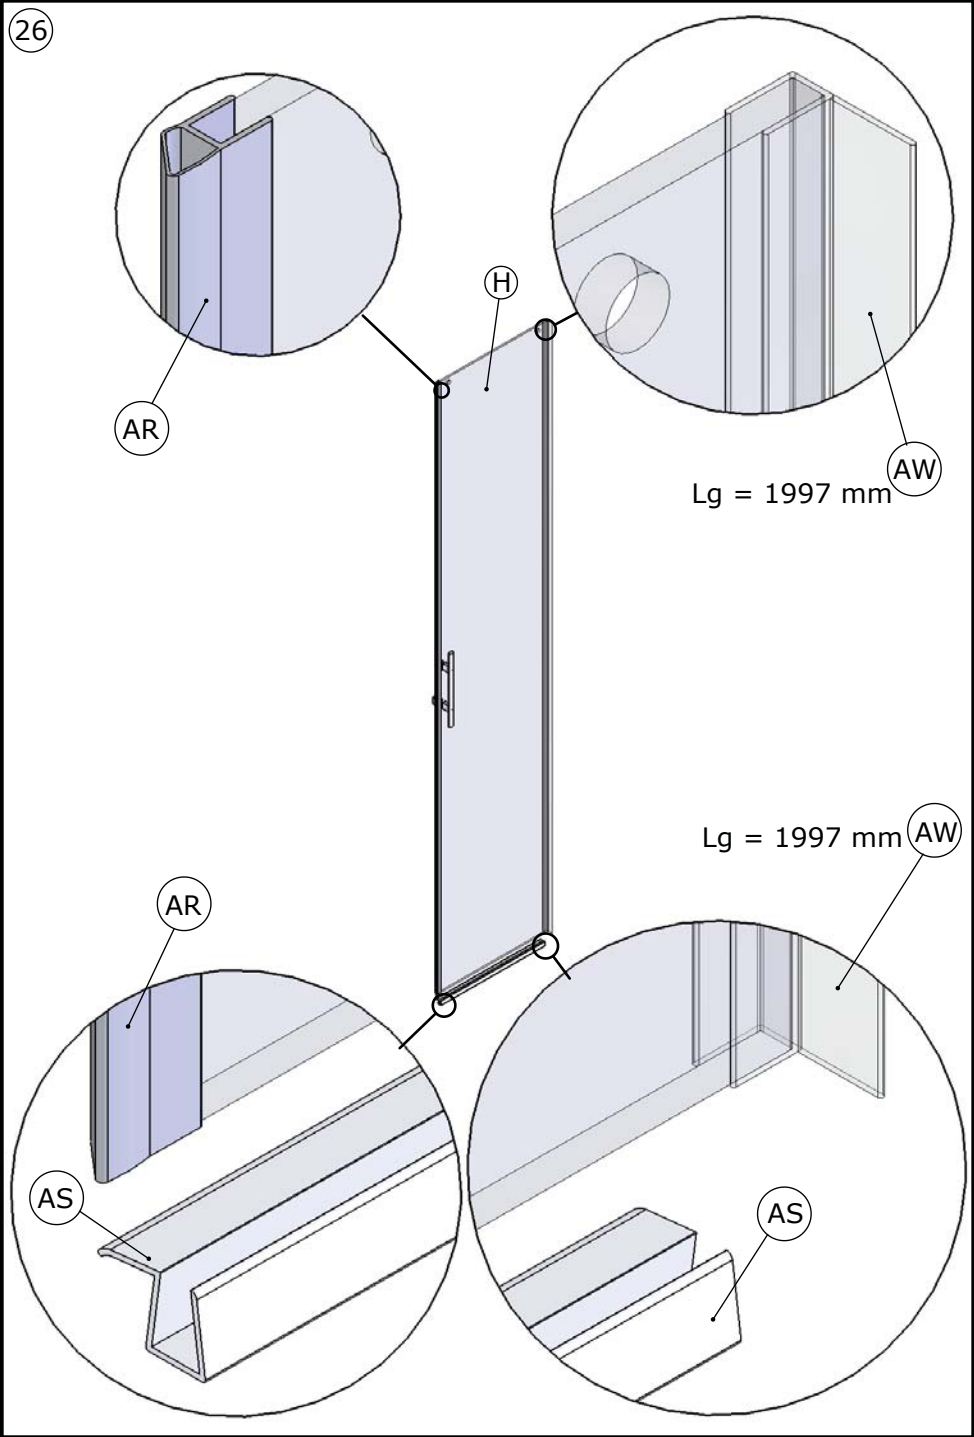


27

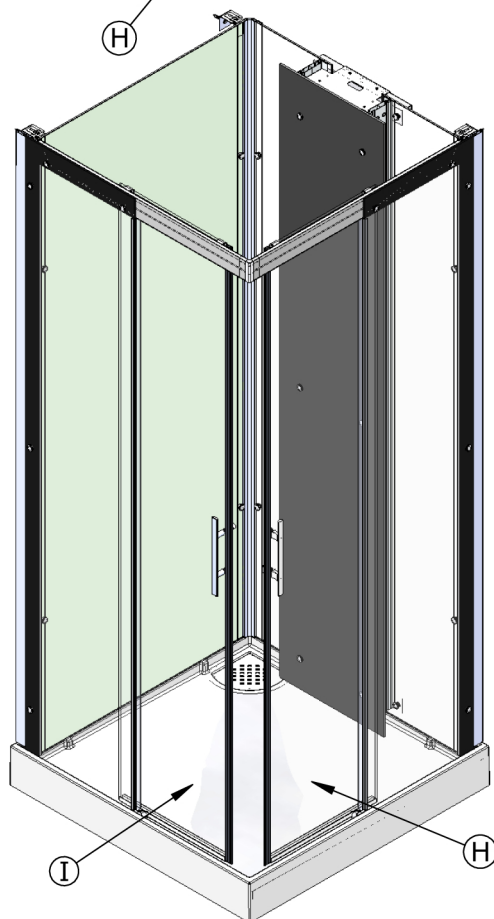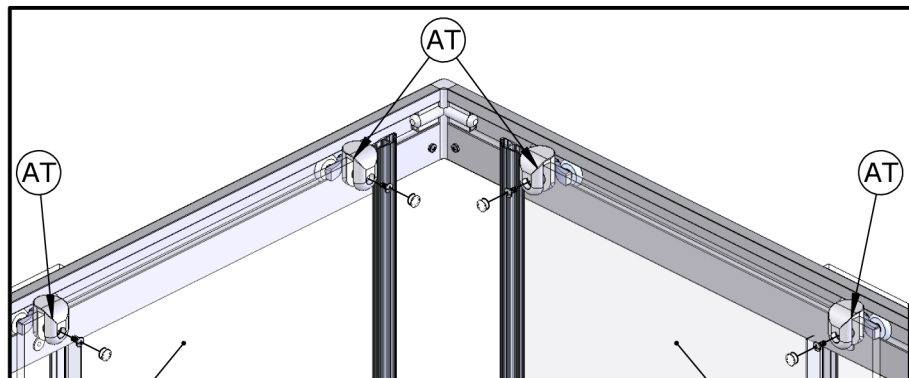

Place the rollers into the top rail then attach the doors to the rollers. Ensure rollers are at the highest adjustment.

28

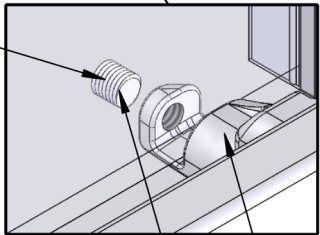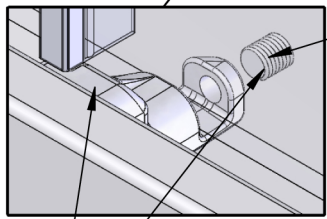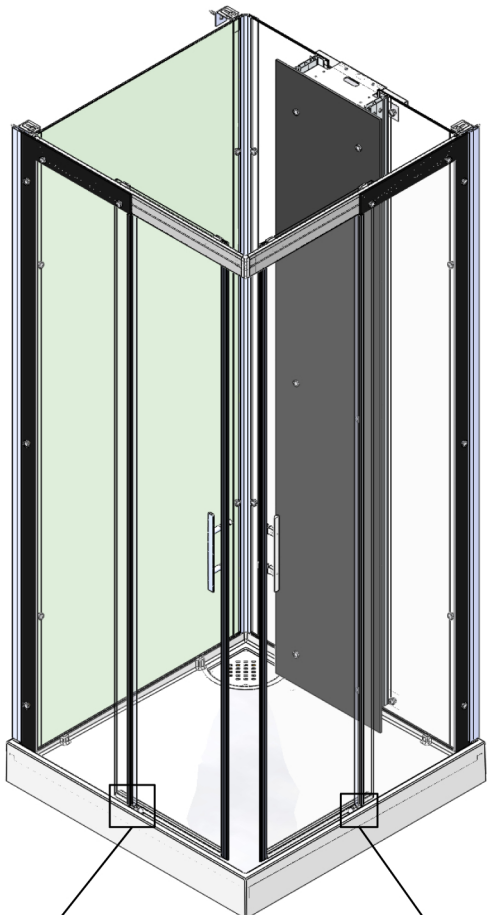

AU



AG

AG


Hand tighten then unscrew half a turn

29


Check that the cubicle is level

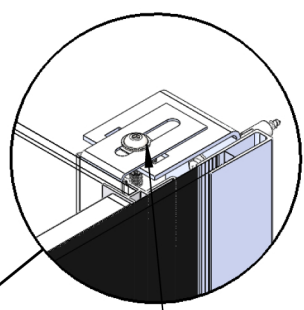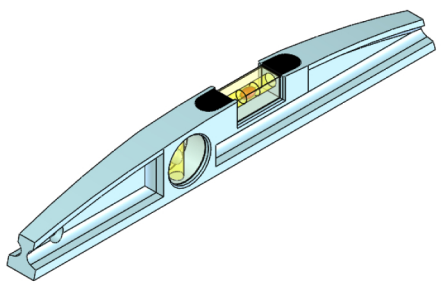

Tighten

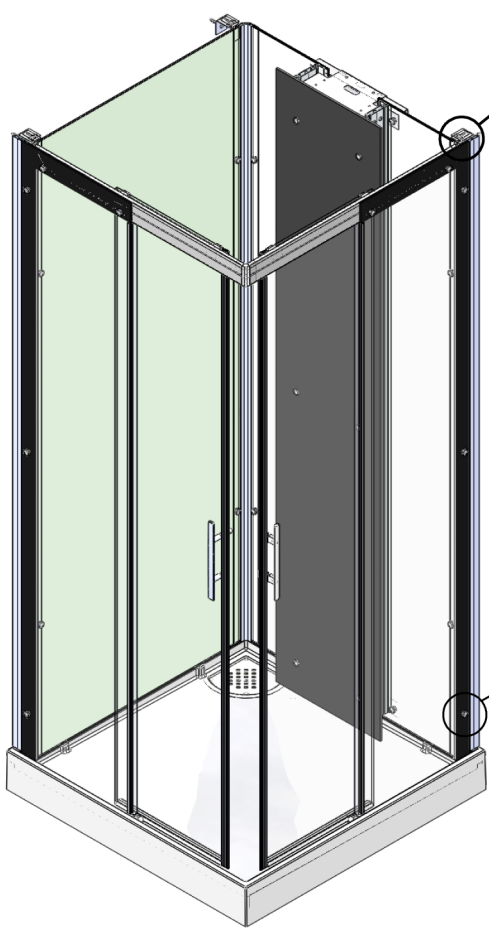


X18

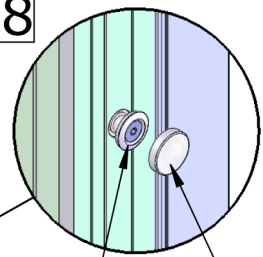


AL

Tighten

30

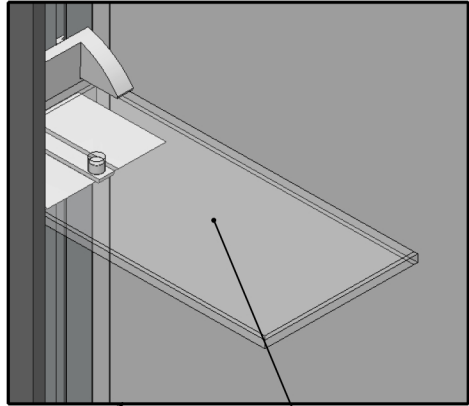


AV





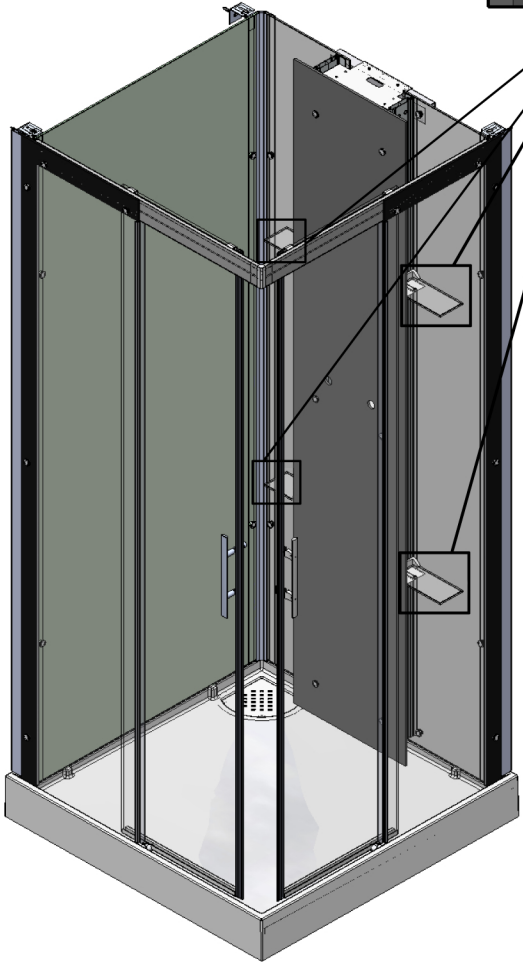


31

Adjust the doors

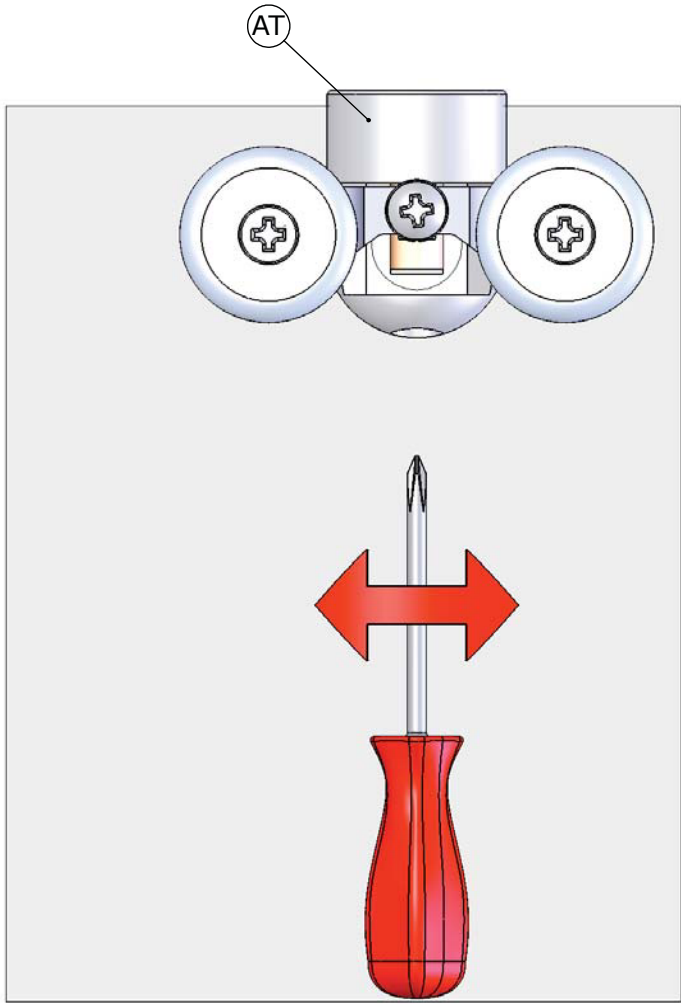

REGLAGE DES ETAGERES
ADJUSTMENT OF SHELVES
REGOLAZIONE MENSOLE
AJUSTE DE LAS ESTANTERIAS
VERSTELBARE REKKEN

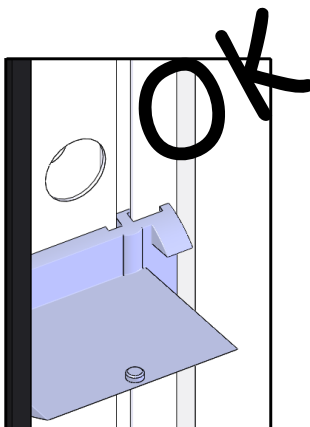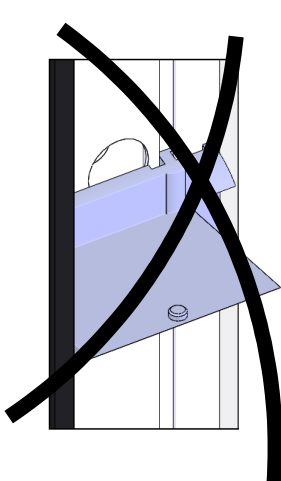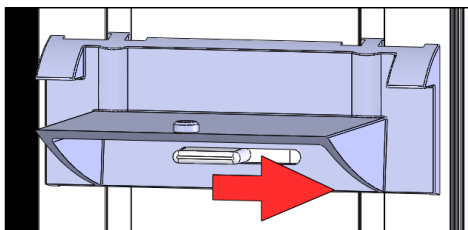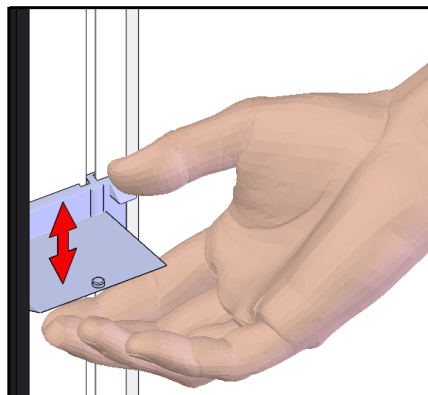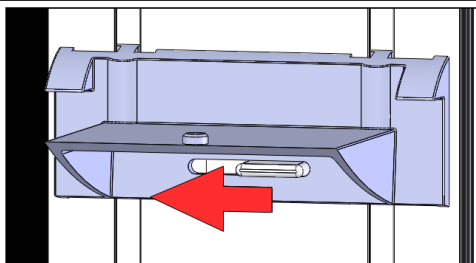



SAV
SERVICE HELPLINES
ASSISTENZA POST-VENDITA
SERVICIO POSTVENTA

FRANCE

02 40 21 29 45

SCHWEIZ

(01) 748 17 44

UK

020 8842 0033

ESPANA

93 544 60 76

IRELAND

04697 33102

NEDERLAND

0475 487 100

DEUTSCHLAND

+49 (0) 6074 / 30928 0

BELGIE

+31 475 487 100

ITALIA

(0382) 6181

BELGIQUE

+31 475 487 100

OSTEREICH

+43 1 710 60 70

РОССИЯ

963 19 40, 773 67 22